



Firmware User's Manual

A1D-311-**V5.12.12**-AC

2014/03/18



ACTi
Connecting Vision

Table of Contents

Recommended PC Specification 4

Preparation before setup 5

Connect to device and setup IP.....	5
Sample screenshots to setup IP of your PC (Win XP).....	7

Configuring the IP device 11

Login.....	11
Live view.....	12
PTZ Control Panel.....	14
How to Use Pan/Tilt (for PTZ models only)	15
How to Zoom the Camera In or Out	15
How to Set the Home Position	16
How to Set Idle Time and Return Camera to Preset Position (for PTZ models only).....	16
How to Set Serial Hex Command Protocol	16
How to Adjust the Focus	16
How to Set Touring Preset Points	17
How to Set and Enable Tours.....	17
Setup Menu	19
Host.....	20
Date & Time	21
Network Section.....	23
IP Address Filtering.....	23
Port Mapping.....	25
ToS.....	27
UPnP™	28
Bonjour.....	28
HTTPS	29
IEEE 802.1X	29
SNMP Setting	30

RTP	31
Speed & Duplex	32
IP Settings	33
Connection Type	33
DNS	34
DDNS	35
Video & Audio	36
Stream Mode	36
Camera Options	39
Compression	43
Motion Detection	47
Image	52
Exposure / White balance	56
Audio	59
OSD/Privacy Mask	60
Event	62
Event Server	62
Event Configuration	66
Event List	74
Manual Event	77
Local Storage Management	78
Status	79
Utilities	80
Setup	85
File Management	86
Event Handler with Local Storage	91
System	97
User Account	97
System Info	98
Factory Default	99
Firmware Upload	100
Save & Reboot	101
Logout	101

Recommended PC Specification

CPU	Core 2 Duo 2.13GHz and above
Memory	2 GB or above
Operating System	Windows XP with SP2 or above. Windows Vista / Windows 2003 / Windows 7 / Windows 2008 Internet Explorer 8.0 / Internet Explorer 9.0 (32-bit)
Video Resolution	SVGA or XGA with 1024x768 resolution

Preparation before setup

Connect to device and setup IP

Our IP device provides access through Internet Explorer. The IP address for your PC must be within the same subnet as the IP device. You need to match the TCP/IP settings between PC and IP device before you can access it via IE.

There are two ways to add devices to the network.

With DHCP server / router:

DHCP server assigns IP addresses to devices automatically. You can find them on the network with our **IP Utility**. It is available on NVR CD and our website:

http://www.acti.com/IP_Utility

Run IP Utility to start auto device search. Click on the underlined IP links to access your IP devices. You do not need to change IP.

Without DHCP server / router:


Please assign a static IP for each device and add them one by one. Connect to the first device by following steps 1 to 5 below.

Before adding more devices into the network, you need to change the current device to a new IP address so no two devices have IP conflict. (Steps 6 to 9).

For adding devices without DHCP, please see following steps.

1. Connect the PC to the Network Switch with the CAT5 cable, and change your PC's IP to 192.168.0.99 / Subnet Mask 255.255.255.0 (101 is just a sample, it may be any number from 1 to 254 except 100.)
2. Connect the device to your Network Switch. If it is a PoE enabled Switch, then the device is powered on. If it is NOT a PoE enabled Switch, please also plug in the Power Adapter.

3. Open Internet Explorer, and type in **Default IP:**
http://192.168.0.100
4. When you see the login window, please input default user and password:
Default Username: Admin Password: 123456
5. After you log in, you will see the video from IP device. To go to the main menu, click the "Setup" button on the top left.
6. Please go to IP settings -> Connection Type. Change the IP mode to Static and the IP address to 192.168.0.101 or any other unused IP (Avoid 192.168.0.100, the IPs of your PCs and other devices already in network.). Click "Apply" then click System -> Save & Reboot.

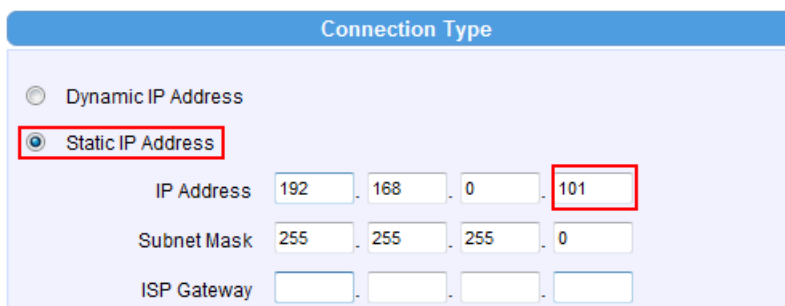

Connection Type

☐ Dynamic IP Address

☒ Static IP Address

IP Address: 192 . 168 . 0 . 101

Subnet Mask: 255 . 255 . 255 . 0

ISP Gateway:

7. Internet Explorer will close after a few seconds. This is normal.
8. Wait for 30 seconds and open IE again by typing in the **new IP**. (In this example, 192.168.0.101). For later device you add into the network, please choose an IP that does not is not used by any existing device.
9. If you have more than one device, continue again from step 2. Assign different new IP to each camera (for instance -> 192.168.0.102, 192.168.0.103 ...). You do not need to unplug the existing devices from the switch because there is no IP conflict.

Sample screenshots to setup IP of your PC (Win XP)


The procedures below show how to setup your IP on Windows XP. If you use operating system other than Windows XP, please refer to OS manuals for proper setup procedures.

STEP1

Start up your PC.


STEP2

Click the [Start] and select the "Control Panel"

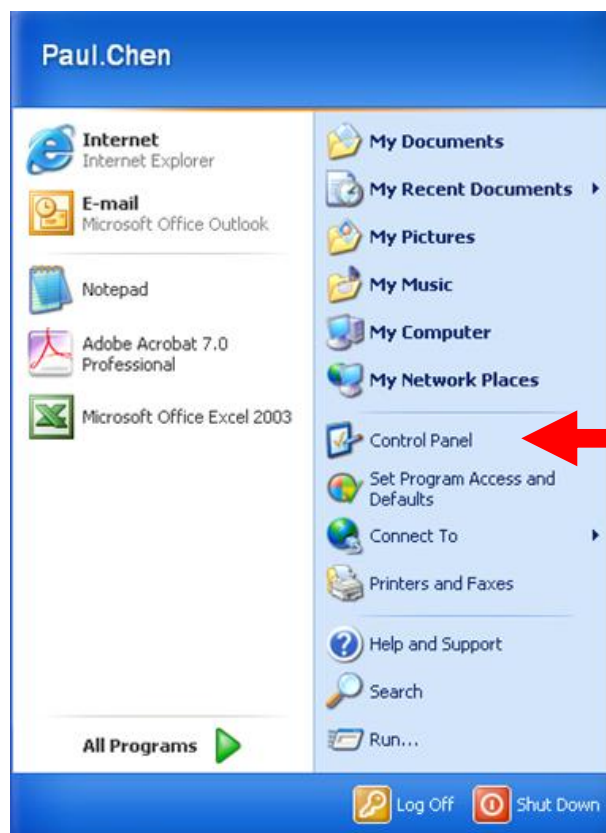


STEP3

Double-click the "Network and Internet connections" icon.

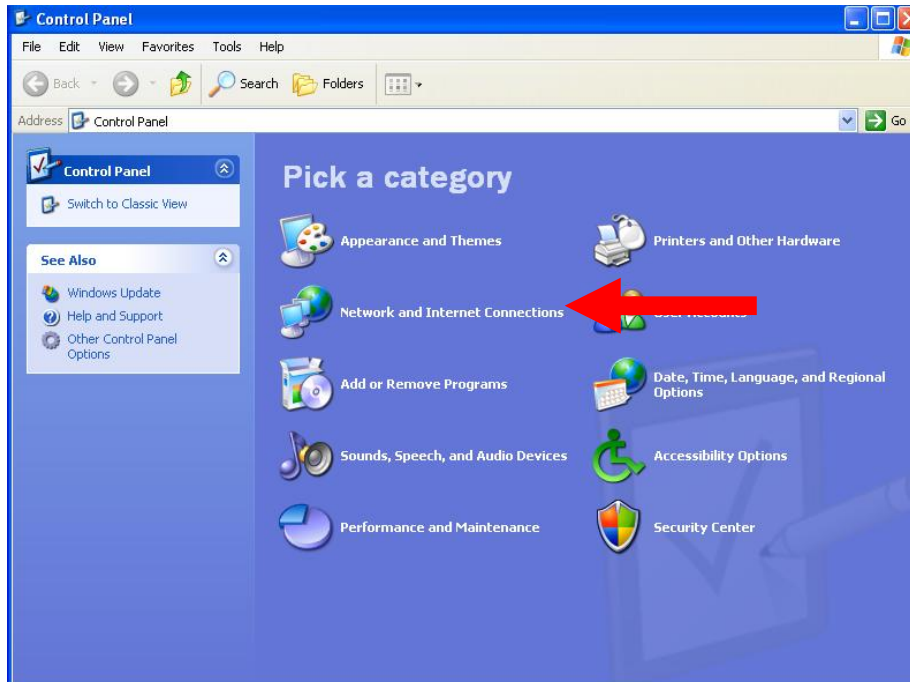
**STEP4**

Double-click the "Network connections" icon

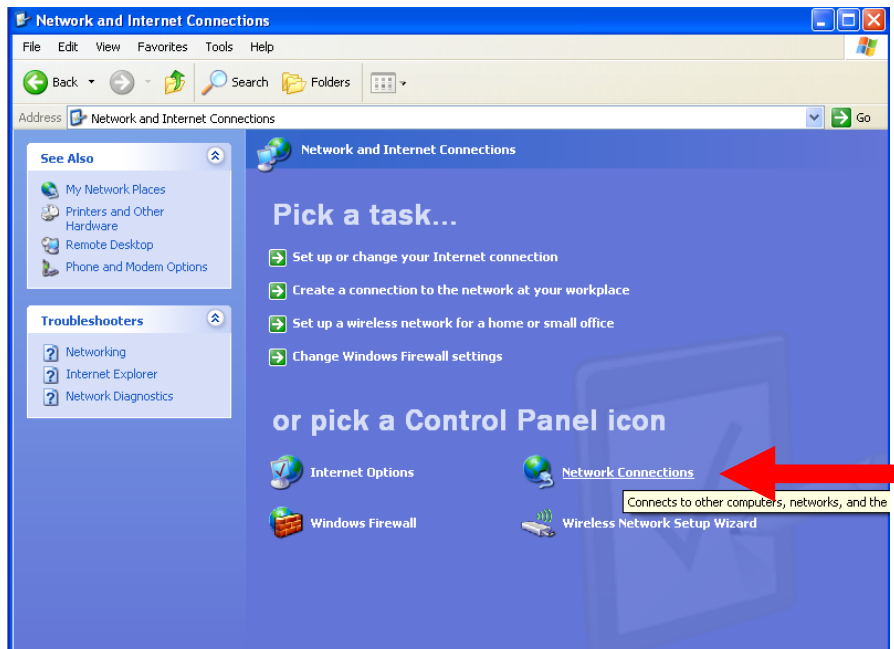


STEP5

Click “Local Area Connections”, and then click “Change settings of this connection” in the Network Task menu.

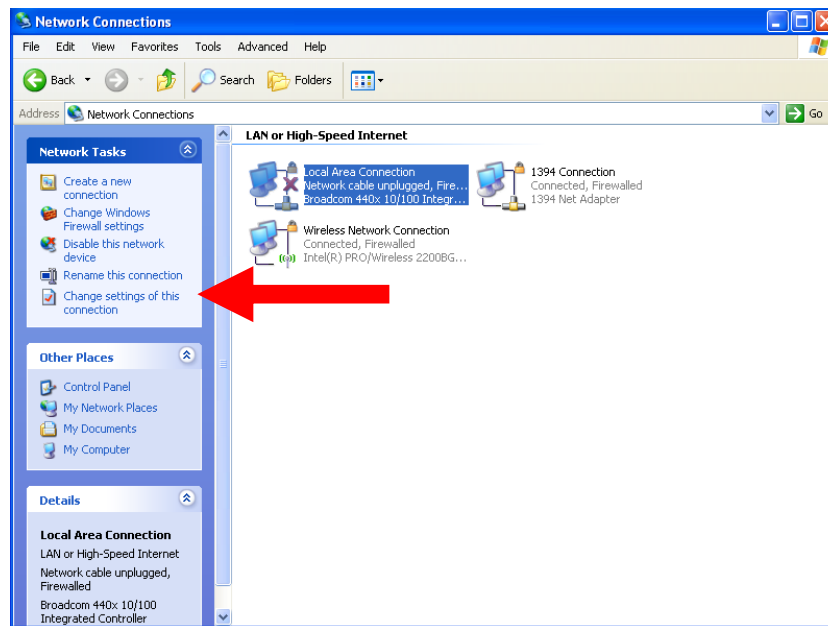
**STEP6**

Click “Internet Protocol (TCP/IP)”, and then click [Properties]

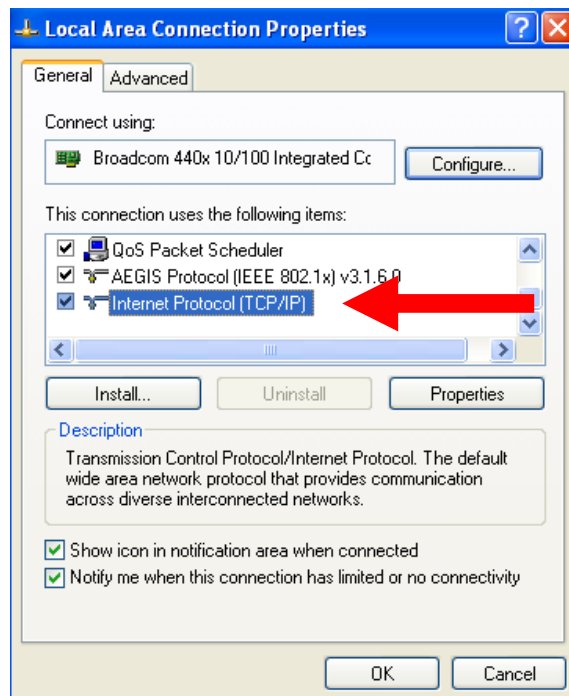

STEP7

Click the “Use the following IP address” radio button and enter the IP address and the subnet mask.

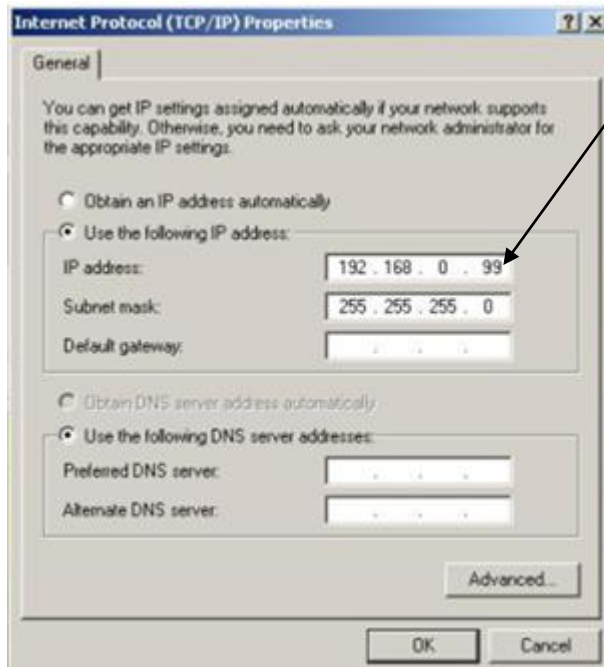

Please set the settings as below.

IP address: 192.168. 0.xxx

Subnet mask: 255.255.255. 0

(NOTE: xxx should be a number from 1 to 254 except 100, which is used by the IP device. Please also make sure that no two equipments use the same IP address in the same network.)

STEP8

Click the [OK] button and the window dialog box will close.

Configuring the IP device

This section describes how to configure the IP device. The administrator has unlimited access to all settings, while the normal user can only view live video. The IP device is configured under a standard browser (Microsoft Internet Explorer 8.0 / 9.0).

Login

STEP1

Open Internet Explorer 8.0 / 9.0. You may download the latest version from:


<http://www.microsoft.com/windows/ie/downloads/default.aspx>

(For Internet Explorer 10.0, please enable "Compatibility View" on the Tools menu in IE browser)

STEP2

Enter the IP address of the IP device and press enter to go to Login Page.

The default IP address is "**192.168.0.100**"

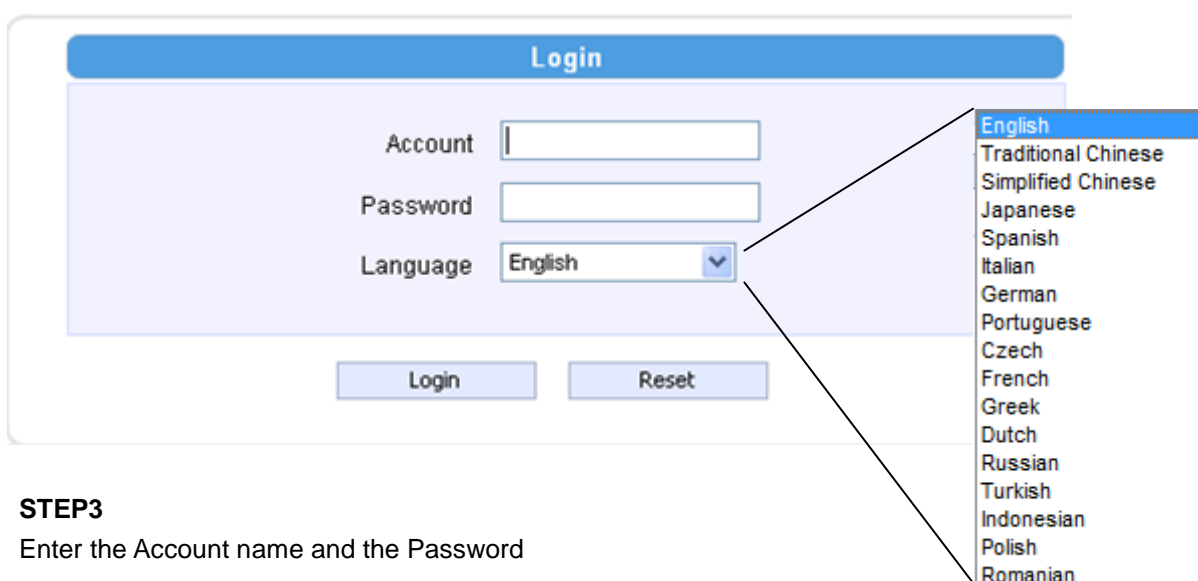

STEP3

Enter the Account name and the Password

 
 
(Default Account: Admin / Password: 123456).

STEP4


Select the language of the IP device user interface.

You can select between English, Traditional Chinese, Japanese, Spanish, Italian, German, Portuguese, Greek, Russia, Turkey, Indonesia and Swedish. This user interface setting will disappear once you log out, if you want to change the default user interface language, please go to [Host] in the "Host" section under the setup tab.





STEP5








Click the  button to login or click the  button to re-enter again. Once you've logged in, the "Live page" will be displayed as below.

Live view

Click the  [Live] tab to show [Live page]. Refer to the table below for how to configure each setting.

**Function List**

Function	Description
 Full Screen	Click the icon  to stretch the preview to full screen. You can click "Esc" button on the keyboard to return to previous display.
 Snapshot	Click the icon  to take a snapshot. The snapshot picture will be saved to the default folder "C:\Users\account name\Picture", in the format of YYYYMMDD_HH_mm_ss.jpg.

5 Audio out	Click the icon  to enable the audio out from PC to IP camera or video server. When it is enabled, your voice will be transferred to the audio out of the IP camera or video server. NOTE: you will need to have a microphone connected to your PC to send out audio.
6 Media	If dual stream mode is enabled, click 6 to select which stream to display (Media 1 or 2). The default is single stream only. To change to dual stream mode, please refer to "Media 1" section under "Setup" tab
7 Encoder Type	Click 7 to select the compression codec used in video encoding. The Encoder type option includes MPEG-4, MJPEG and H.264. Once selected, the video server/IP camera will start to send video in new stream type.
8 Display size	Click  or  to adjust display screen size
9 Audio in 	Click the speaker icon to toggle mute / audio in. Click and drag to decide volume below. You must first enable audio in setting to change here.
10 PTZ Control Panel	Click on the PTZ button to pop up the Control panel, and enable Mouse PTZ at the same time. For zoom lens camera, Panning and Tilting via PT platform will only be activated by mouse PT command. *Note: This is not available in 4 cropped VGA mode.
11 DO Settings	Click  to set DO output level to High. Click  to set DO output level to Low. If your device has more than one DO available, each DO is controlled separately.
12 Network status	 Indicates the network state. If the light on the right is green, it means the network is ok. If the light is gray, it means the network is broken. The light on the left is not used
13 Live View	Live view from Camera is displayed here. The title bar shows the time and date.

If you want to setup this IP camera/video server, please click the **2** [Setup] tab to switch to "Setup Page"


PTZ Control Panel

For PTZ and zoom camera models, click the PTZ button on the Live View screen to display the PTZ Control Panel. On the PTZ Control Panel, users can do any the following:


- Set the home position ❶
- Set the serial hex command protocol and address ❷
- Zoom the camera in or out as well as adjust the zoom speed and step size ❸
- Set the focus to auto refocus or manual ❹
- Set Preset points for touring ❺
- Set Camera Tour
- Pan the camera ❻
- Set the camera to go to a preset position during idle time ❼
- Enable Digital zoom ❽

The PTZ Control Panel may differ depending on camera model.

Other Zoom Camera Models

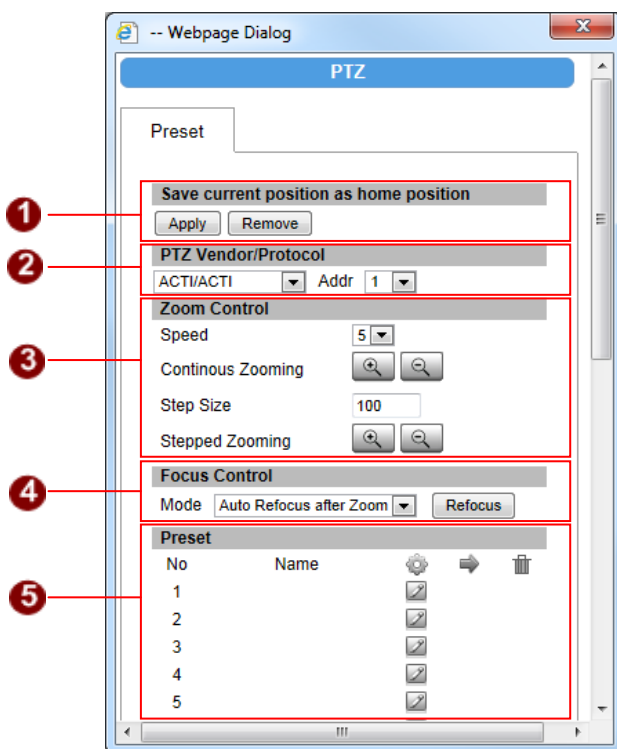

KCM-8211 / KCM-8111 Models

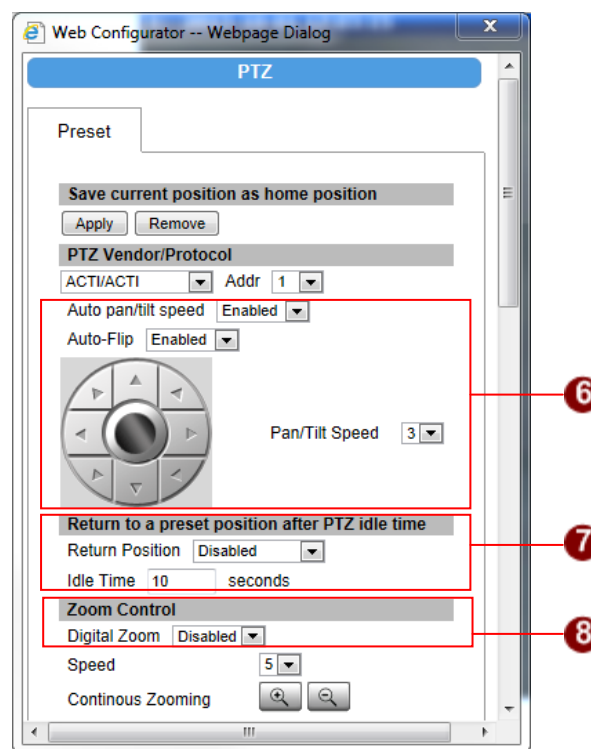





How to Use Pan/Tilt (for PTZ models only)

Click the pan/tilt controls **6** (shown on the right) to pan/tilt the PTZ camera.

Other pan/tilt features include:

- **Auto pan/tilt speed:** When “Enabled”, the camera automatically sets the pan/tilt speed according to the zoom ratio and the selected pan/tilt speed while retaining the clarity and quality of image even as the camera is panning or tilting. When “Disabled”, the pan/tilt speed follows the value selected on the **Pan/Tilt Speed** field.
- **Auto-Flip:** When “Enabled”, the camera automatically flips the image when the camera is panned at 180° and then continues panning to the same direction up to 360°. When “Disabled”, users can only pan the camera to one direction up to 180°.
- **Pan/Tilt Speed:** Select the desired pan/tilt speed. The bigger the number, the faster the speed is.





TIP: While the PTZ Control Panel is open, instead of using the pan/tilt controls, move the mouse cursor over the Live View, the mouse cursor will turn into zoom in/out or directional icons (e.g.  /  /  /  / etc.). Click or drag the mouse to zoom in/out or pan/tilt the camera view.



How to Zoom the Camera In or Out

Zooming can be done continuously or by one step (one click) at a time.





To zoom continuously, do the following:

1. On **Zoom Control** **3**, select the **Speed**, wherein the bigger the number, the faster is the zooming speed.
2. Click and hold the left mouse button on zoom in  or zoom out . When the mouse button is released, zooming stops.



To zoom by step zooming, do the following:

1. On **Zoom Control** **3**, enter the desired step size. **Size** is the amount of zoom scale taken in each step.
2. Click the left mouse button on zoom in  or zoom out . One zoom step is taken for each click.

For PTZ camera models, users can enable the **Digital Zoom** **8** feature. When enabled, once the optical zoom reached its maximum, the camera continues to zoom in the image using digital zoom.

TIP: While the PTZ Control Panel is open, instead of using   buttons, move the mouse cursor over the Live View, the mouse cursor will turn into zoom in/out (e.g.  / ). Click or drag the mouse to zoom in/out the camera view.

How to Set the Home Position


1. Using the **Zoom Control** , zoom on the area that you want to set as the home position.
2. Click the **Apply** button on the **Save current position as home position** .

How to Set Idle Time and Return Camera to Preset Position (for PTZ models only)


This feature allows the camera to go directly to Home or to a preset position after an idle period of time. Idle time refers to the time when the camera has no operation like pan, tilt, zoom, or tour.



1. On **Idle Time**, type the time in seconds.
2. On **Return Position**, select "Home Position" or a preset point to direct the camera position.

How to Set Serial Hex Command Protocol

ACTi cameras and video management systems fully support the URL Command, a high level PT command set. However, in case the cameras will be used with devices from third party vendors that only support Serial Hex Command (low level PT command set), users must select the **PTZ Vendor/Protocol** to use and its address . Otherwise, leave the default settings.

How to Adjust the Focus













After zooming the camera in or out, it is recommended to readjust the focus in **Focus Control** . Options are:

- **Auto Refocus after Zoom:** Select this option to let the camera automatically adjust the focus after zooming.
- **Manual:** Select this option to manually adjust the focus. This feature is useful if the automatic focus position is not the position that the user wants to achieve. To adjust the focus manually, select the **Step Size** and then click the step focus in  or focus out  icons until the desired focus is achieved.





When an option is selected, click the **Refocus** button to apply the focus adjustment.

How to Set Touring Preset Points

Preset points are user-defined areas that the camera can zoom in to. A series of preset points can be grouped as one **Tour**. Up to 32 preset points can be configured.

Preset				
No	Name			
1	Preset 1			
2	Preset 2			
3				
4				
5				

To create a preset point, do the following:

1. On **Preset** , click a  icon to start creating a preset point.
2. Under the **Name** field, type a preset point name.
3. Using the **Zoom Control** , zoom on the area that you want to set as the preset point.
4. Once done, click the  icon again to close and complete the preset point.
5. Repeat the above procedures to create more preset points.

To go to the preset point directly, click .

To delete the preset point, click .

How to Set and Enable Tours

Once a preset point is created, the **Touring Control** page tab appears. Click the **Touring Control** page tab to configure the **Preset Tour**. A **Preset Tour** directs the camera to cycle through a sequence of preset points and how long to stay on each preset point.

PTZ

Preset

Touring Control

Touring Control

Disabled

Pan/Tilt Speed


5

Select a Preset Point


Tour 1

Edit Tour

Preset Points







To set or modify a tour, do the following:

1. On **Select a Preset Point**, select a tour and then click **Edit Tour**.
2. Select a preset point from the list, set the duration (in seconds) of how long the camera will stay in that point, and then click .

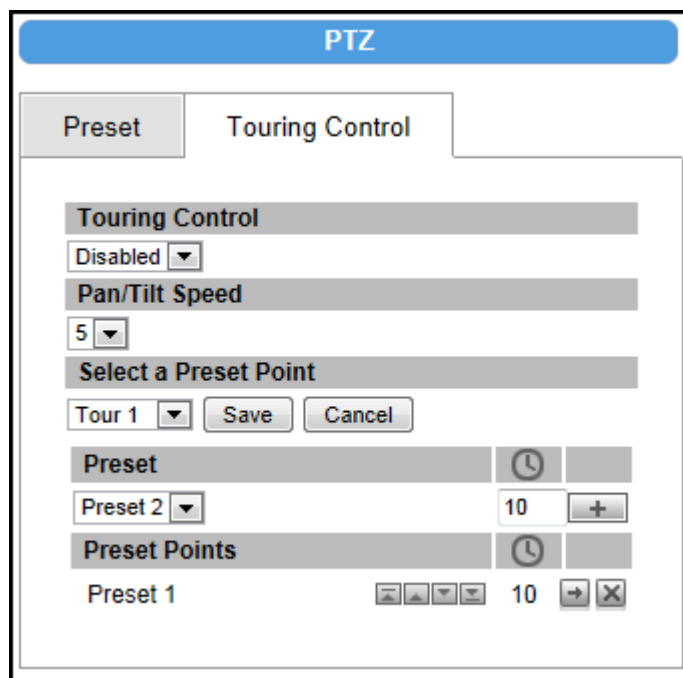

3. On the **Preset Points**, the preset points added to the Tour are listed.



- To change the sequence of preset points, click the  (first / up / down / last) icons.
 - To directly go to a preset point, click the  icon.
 - To delete a preset point from the list, click the  icon.
4. Repeat the steps 2 and 3 to add more preset points to the tour.
 5. On **Pan/Tilt Speed**, select the pan/tilt speed. The bigger the number the faster the speed is.
 6. Once done, click the **Save** button on **Select a Preset Point**.
 7. On **Touring Control**, select the tour name to activate. Once activated, the camera will start the tour.

Setup Menu


Click **Setup** to display the Setup menu on the left side panel.

By default, submenu options are hidden for ease of navigation.

Click the “+” icon to expand the menu.


The fully expanded menu is shown on the right.

Note: Menu items may vary depending on camera model.

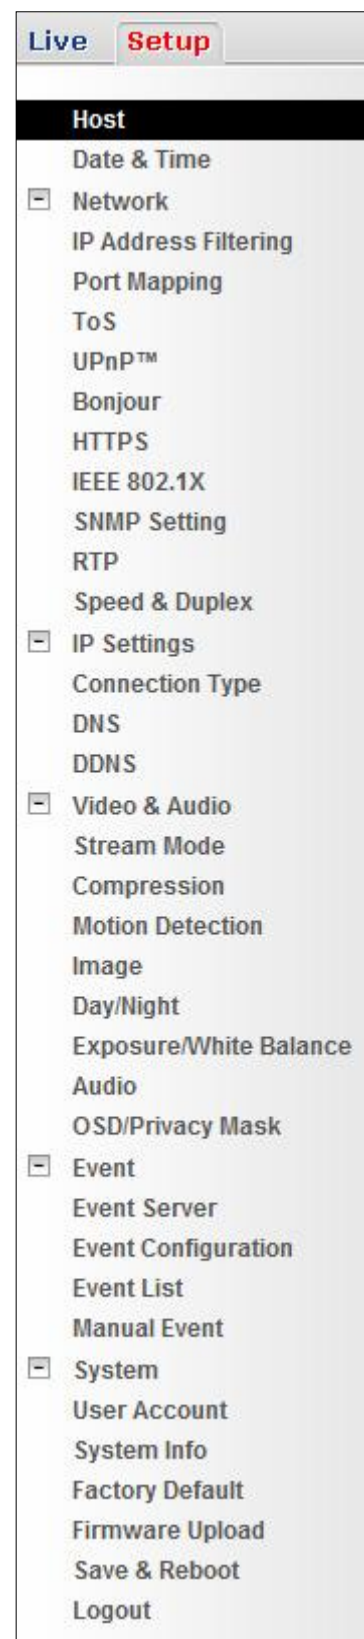

Host

Click the [Host] to enter Host settings page. Refer to the table below for how to configure each setting.

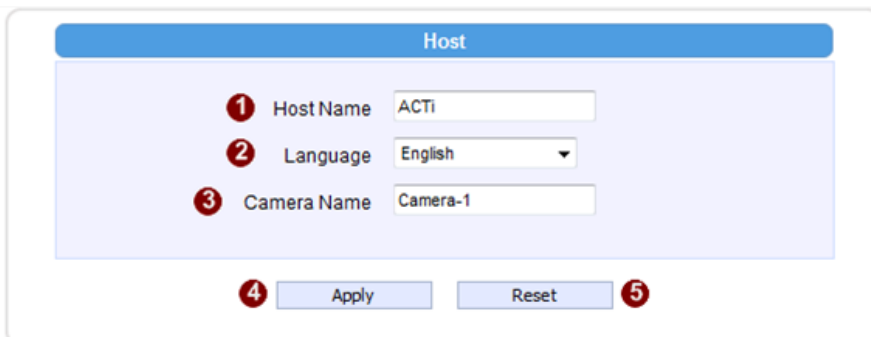


The screenshot shows the 'Host' settings page. It has a blue header bar with the title 'Host'. Below the header, there are three configuration items: '1 Host Name' with a text input field containing 'ACTi', '2 Language' with a dropdown menu showing 'English', and '3 Camera Name' with a text input field containing 'Camera-1'. At the bottom, there are two buttons: '4 Apply' and '5 Reset'.

Parameters	Description
1 Host name	Enter a host name, and this host name will be shown when you use the IP utility or the SDK to search for the IP device.
2 Language	Select the language of default user-interface. Each user login will see the default user-interface first.
3 Camera name	The camera name is reserved for customer use.

Click the **4** [Apply] button to confirm the settings or click the **5** [Reset] button to re-enter the parameters.

For cameras with serial port interface (like RS-232, RS-485, RS-422), the “Serial Setting” also appears on the Host page.

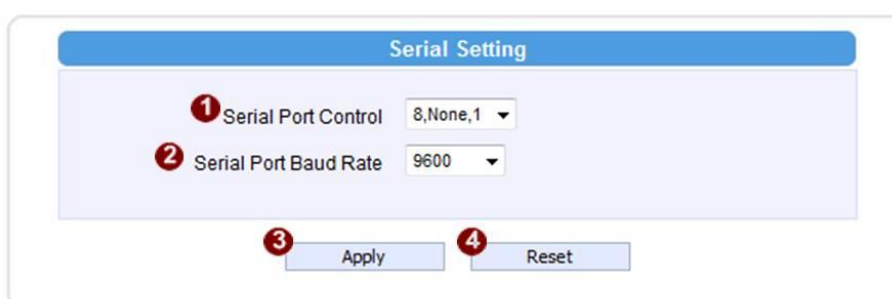

The screenshot shows the 'Serial Setting' page. It has a blue header bar with the title 'Serial Setting'. Below the header, there are two configuration items: '1 Serial Port Control' with a dropdown menu showing '8,None,1', and '2 Serial Port Baud Rate' with a dropdown menu showing '9600'. At the bottom, there are two buttons: '3 Apply' and '4 Reset'.

Parameters	Description
1 Serial Port Control	Select the control value of corresponding serial port.
2 Serial Port Baud Rate	Select the Baud Rate of serial port.

Click the **3** [Apply] button to confirm the settings or click the **4** [Reset] button to re-enter the parameters

Date & Time

Date Setting

1
☐ SNTP/NTP Server

IP Address
2

Sync Time
3

4
☒ Set Manually

Date / /
5

Time : :
6

7
 Time Zone
7

8
☐ Day Light Saving

Start Time:
9

10

End Time:
9

11

12

13


Click the [Date & Time] item under Setup to see Date Setting Page. Refer to the table below for how to configure each setting. The default method is to set manually.

Date Setting

Parameters	Description
1 SNTP/NTP server	<p>Click this to enable IP device's SNTP/NTP function. This enables this IP device to synchronize its time settings with a SNTP/NTP server. You can use this function to make sure all your IP devices' time is the same. Additionally, with our embedded digital-time-code in the streaming, you can tell the event sequence accurately.</p> <p>2 IP address: Enter the IP address of the SNTP/NTP server.</p> <p>3 Sync time: Select the time interval for this IP device to synchronize its time.</p>
4 Set manually	<p>Click this to manually setup the date & time.</p> <p>5 Date : Select the date</p> <p>6 Time: Select the time</p>
7 Time zone	Select the time zone offset for local settings
8 Day Light Saving	<p>Select Type 1 9 to specify daylight saving time by week number in a month; select Type 2 to specify daylight saving time by date.</p> <p>10 Start Time: Select the daylight savings start time.</p> <p>11 End Time: Select the daylight savings end time.</p>

Click the **12** [Apply] button to confirm the settings or click the **13** [Reset] button to re-enter the parameters.

Network Section

Click the  [Network] item on the "Setup Page".

IP Address Filtering

WARNING: Please be very careful when using this function, as you may lose access to your camera if you make mistakes in setup. You may either accidentally deny yourself access, or forgot to include your own IP address in the allowed address list. You will need to perform hard reset to be able to access the device again.

Click the [IP Address Filter] item to display the "IP Address Filtering Page". Refer to the table below for how to configure each setting.

IP Address Filtering

1 ☒ IP address filter enable

Set IP address

2 Blocked IP Address/Netmasks

NO.	IP address	Netmask	Enabled
3 1	0 . 0 . 0 . 0	4 0 . 0 . 0 . 0	5 <input type="checkbox"/>
2	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
3	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
4	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
5	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
6	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
7	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
8	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
9	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
10	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
11	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
12	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
13	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
14	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
15	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>
16	0 . 0 . 0 . 0	0 . 0 . 0 . 0	<input type="checkbox"/>

6
7

Apply
Reset

Parameters	Description
1 IP address filter enable	Check this box to enable IP Address Filtering.
2 Filter Method	<p>The filter can be set in either "Allow" mode or "Block" mode.</p> <ol style="list-style-type: none"> 1. "Allow" mode will refuse access to all IP addresses except the ones listed below. 2. "Block" mode will accept all incoming access except the IP addresses listed below. <p>Make sure you include the Netmask in your consideration.</p>
3 IP Address	The IP address you wish to allow or block. Please note that the actual range is modified by the Netmask.
4 Netmask	Using Netmask allows you to set filtering for a whole range of IP address at once, without the need to enter all of them individually. If you are not sure about the function of netmask, then you should use 255.255.255.255, and it will affect only a single IP address per line of entry, or use 255.255.255.0 to use the same setting for all IP addresses starting with the same three numbers. .
5 Enable	For each entry, you must check this box for it to be effective. For an entry that you no longer need but does not wish to delete, you can uncheck it, and the system will remember it for future use. If a new entry that has never been used before does not have Enable checked, then it will not be stored in memory.
6 Apply	Click this to use the current displayed info to do IP Address filtering. If you setup correctly, it will change into a grayed out "Success" in a few seconds.
7 Reset	Click this button to re-enter the parameters.

Click the **6** [Apply] button to confirm the settings or click the **7** [Reset] button to re-enter the parameters.

Port Mapping

Click the [Port Mapping] item to display the "Port Mapping Page". Refer to the table below for how to configure each setting.

Port Mapping

HTTP Port*

HTTPS Port*

Search Server Port1

Search Server Port2

Control Server Port

Streaming Server Port

Multicast Server Port for Media1

Multicast Server Port for Media2

RTSP Server Port

RTP Multicast Video Port for Media1

RTP Multicast Audio Port for Media1

RTP Multicast Video Port for Media2

Multicast Setting -----

Multicast IP
[224.5.0.1 ~ 239.255.255.255]

Multicast TTL [1~255]

IGMP

* New settings will only take effect after [Save & Reboot]


Parameters	Description
HTTP port	Select the port assigned for HTTP protocol access
HTTPS Port	Select the port assigned for HTTPS protocol access
Search server port1	Select the first port used by server search applications to detect this IP device. (e.g. IP utility)

Search server port2	Select the first port used by server search applications to detect this IP device. (e.g. IP utility)
Video server port	Select the port used to support video control function by application programs. (e.g. NVR)
Streaming server port (TCP Only)	Select the port used by this IP device for Video Streaming.
Multicast Server Port of Media 1	Select the port for multicast video streaming of stream 1
Multicast Server Port of Media 2	Select the port for multicast video streaming of stream 2
RTSP port	Select the port assigned for RTSP protocol access
RTP Multicast Video Port for Media1	Select the port for the multicast video streaming of stream 1 via RTP protocol
RTP Multicast Audio Port for Media1	Select the port for the multicast audio streaming of stream 1 via RTP protocol
RTP Multicast Video Port for Media2	Select the port for the multicast video streaming of stream 2 via RTP protocol
Multicast IP	Select the multicast IP. Default settings is 228.5.6.1
Multicast TTL	Select the multicast TTL. Default setting is 255.
IGMP	Select video type connected to the video-in of this IP device. If you use an incorrect video type, some images might be lost.

Click the [Apply] button to confirm the settings or click the [Reset] button to re-enter the parameters.

ToS

Click the [ToS] (Type of Service) item to display the “Type of Service” page. Refer to the table below for how to configure each setting.

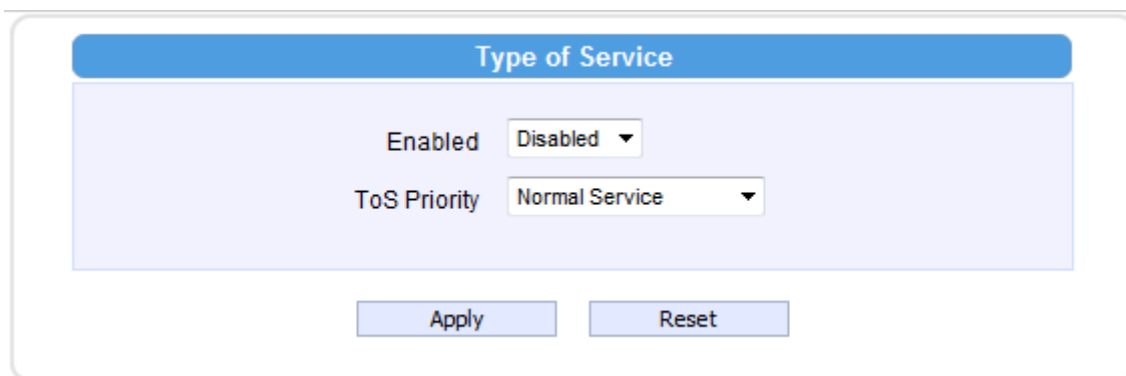


Parameters	Description
Enabled	Select whether to enable or disable the “Type of Service” (ToS) function. This function defines the priorities of how the data from the camera is handled by the routers that support the ToS concept.
ToS Priority	By default, the ToS priority is set as “Normal Service”. Other priority options are: <ul style="list-style-type: none">1. Minimize Delay2. Maximize throughput3. Maximize Reliability4. Normal Service

Click the [Apply] button to confirm the settings or click the [Reset] button to re-enter the parameters.

UPnP™

Click the [UPnP™] item to display the “UPnP™ Setting Page”.

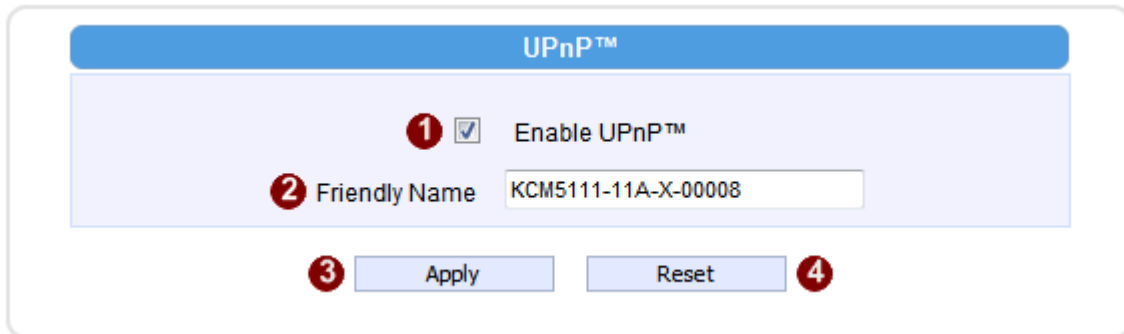


The screenshot shows the UPnP™ setting page. At the top is a blue header bar with the text "UPnP™". Below it is a light blue box containing the settings. Inside this box, there is a checkbox labeled "Enable UPnP™" with a red circle containing the number "1" next to it. Below the checkbox is a text field labeled "Friendly Name" with a red circle containing the number "2" next to it; the text field contains the value "KCM5111-11A-X-00008". At the bottom of the light blue box are two buttons: "Apply" and "Reset". A red circle containing the number "3" is next to the "Apply" button, and a red circle containing the number "4" is next to the "Reset" button.

Click checkbox **1** to enable or disable the UPnP™ function. Edit the UPnP Friendly Name in text field. **2**

Click the [Apply] button **3** to confirm the settings or click the [Reset] button **4** to re-enter the parameters.

Bonjour

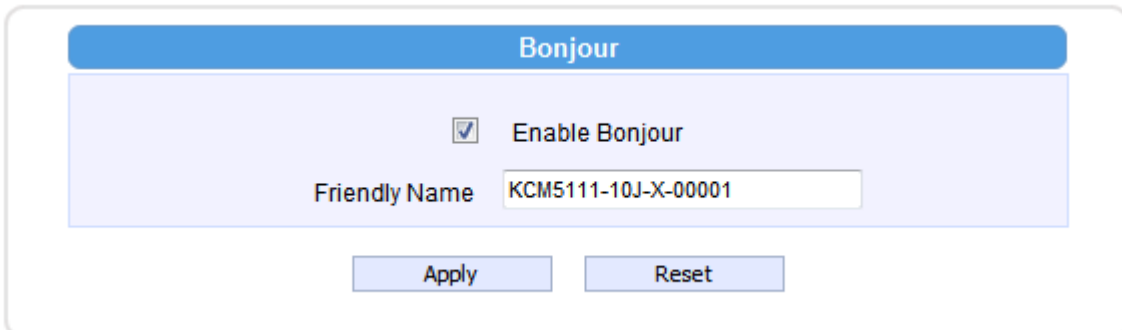

The screenshot shows the Bonjour setting page. At the top is a blue header bar with the text "Bonjour". Below it is a light blue box containing the settings. Inside this box, there is a checkbox labeled "Enable Bonjour" with a checked mark. Below the checkbox is a text field labeled "Friendly Name" containing the value "KCM5111-10J-X-00001". At the bottom of the light blue box are two buttons: "Apply" and "Reset".


Bonjour is a protocol developed by Apple, Inc. This protocol allows for easy searching of devices on network. You may enable Bonjour and search for this device via its Friendly Name.

HTTPS

HTTPS is to create a secure channel over an insecure network. There are two methods to create, Certificate Signing Request (CSR) and Self-Signed Certificate.

Certificate Signing Request (CSR): User uses a signed certificate issued by trusted Certification Authority (CA).

Self-Signed Certificate: User wants to use the certificate created and issued by user himself.

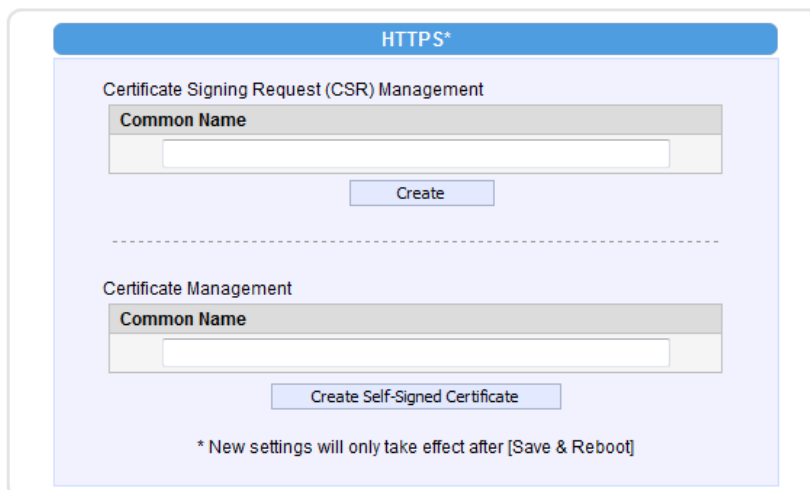


The screenshot shows the 'HTTPS*' configuration screen. It has a blue header bar with the text 'HTTPS*'. Below the header, there are two sections. The first section is titled 'Certificate Signing Request (CSR) Management' and contains a text input field labeled 'Common Name' and a 'Create' button. The second section is titled 'Certificate Management' and contains a text input field labeled 'Common Name' and a 'Create Self-Signed Certificate' button. At the bottom of the screen, there is a note: '* New settings will only take effect after [Save & Reboot]'.

Press "Create" or "Create Self-Signed Certificate" button and configure settings in the pop-up screen to install the certificate.

Note that the new setting will only take effect after "Save & Reboot".

IEEE 802.1X


Please enable IEEE 802.1x and configure settings in the screen below. Note that the new setting will only take effect after "Save & Reboot".

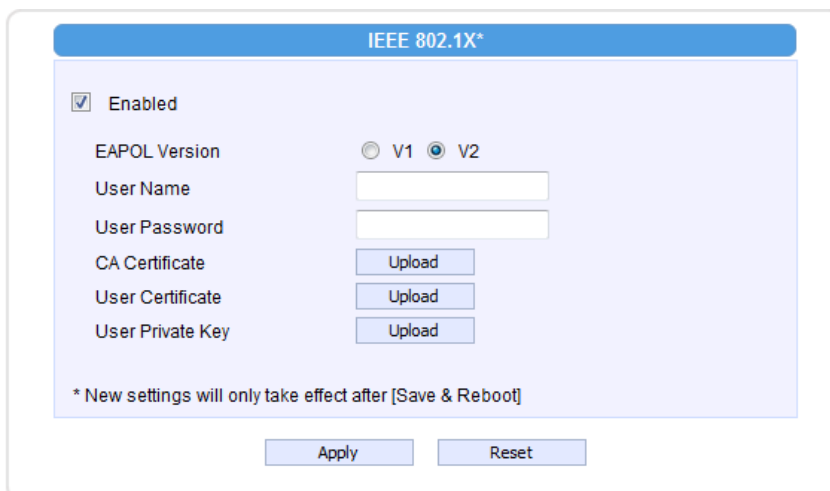

The screenshot shows the 'IEEE 802.1X*' configuration screen. It has a blue header bar with the text 'IEEE 802.1X*'. Below the header, there are several settings. The first is a checkbox labeled 'Enabled' which is checked. Below this is the 'EAPOL Version' section with two radio buttons: 'V1' and 'V2', where 'V2' is selected. There are three text input fields: 'User Name', 'User Password', and 'User Private Key'. Below each input field is an 'Upload' button. At the bottom of the screen, there is a note: '* New settings will only take effect after [Save & Reboot]'. At the very bottom, there are two buttons: 'Apply' and 'Reset'.

SNMP Setting

Click the SNMP Setting item to display the SNMP setting Page

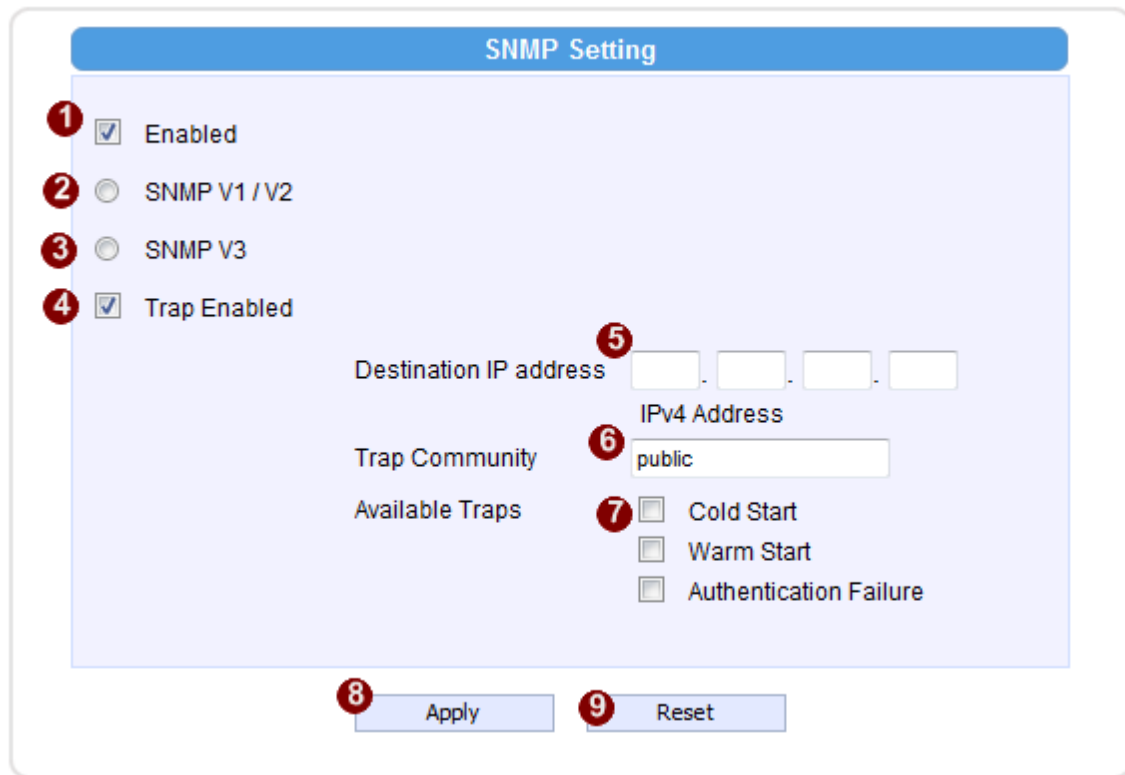

The image shows the 'SNMP Setting' configuration page. It has a blue header bar with the title 'SNMP Setting'. Below the header, there are several settings: 1. A checkbox labeled 'Enabled' which is checked. 2. Two radio buttons: 'SNMP V1 / V2' and 'SNMP V3'. 3. A checkbox labeled 'Trap Enabled' which is checked. 4. A 'Destination IP address' field with four sub-fields for IP octets. 5. An 'IPv4 Address' label. 6. A 'Trap Community' text field containing the word 'public'. 7. An 'Available Traps' section with three checkboxes: 'Cold Start', 'Warm Start', and 'Authentication Failure'. At the bottom, there are two buttons: 'Apply' and 'Reset'.

Click **1** to enable SNMP function.

Select **2** to use SNMP V1/V2 or **3** to use SNMP V3

Check the check box **4** to enable traps

Enter the Destination IP address in **5**


Enter the Trap Community used in **6**

Select the Available trap in **7**

Click the [Apply] button **8** to confirm the settings or click the [Reset] button **9** to re-enter the parameters.

RTP

Click RTP Item to configure RTP Settings

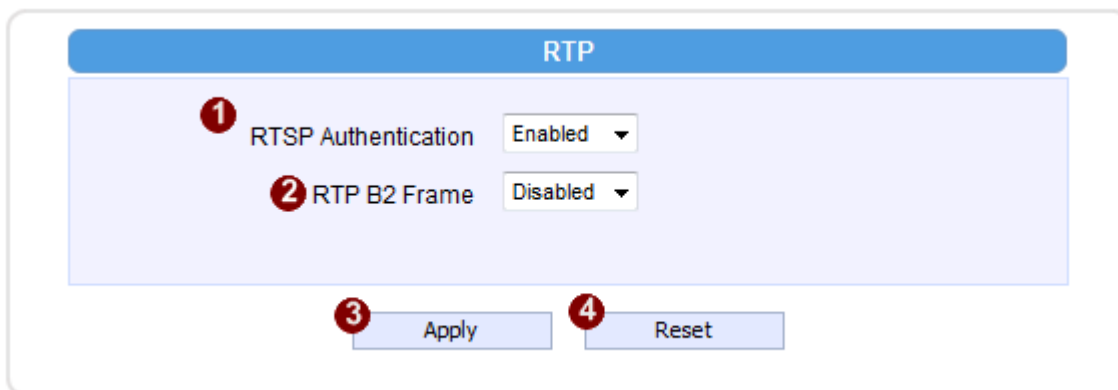


1 RTSP Authen Enable	Check box to enable RTP streaming's Account/Password authentication.
2 RTP B2 Frame Enable	Check box to enable the B2 frame in RTP streaming

Click the [Apply] button **3** to confirm the settings or click the [Reset] button **4** to re-enter the parameters.

Speed & Duplex

Click the [Speed & Duplex] item in the network section to display the "Speed and Duplex" Page. Refer to the table below for how to configure each setting.

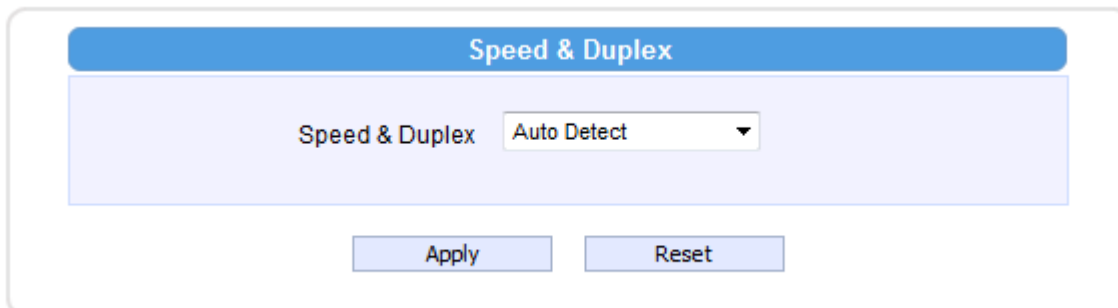


Parameters	Description
Speed & Duplex	<p>This item lets you select the network transmission speed. You can select from</p> <ol style="list-style-type: none">1. Auto detect (default setting)2. 100Mbps / Full duplex3. 100Mbps / Half duplex4. 10Mbps / Full duplex5. 10Mbps / Half duplex

Click the [Apply] button to confirm the settings or click the [Reset] button to re-enter the parameters.

IP Settings

Connection Type

Click the [Connection Type] item to display the "Connection Type Page". Refer to the table below for how to configure each setting.

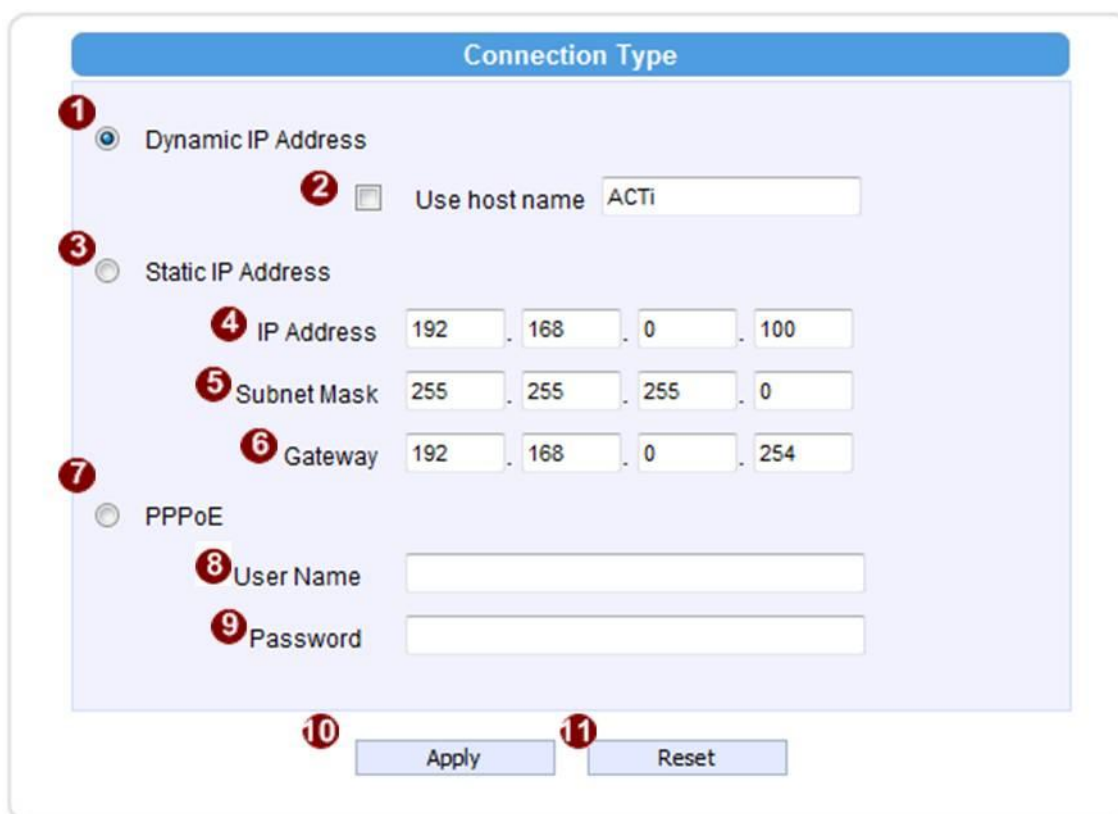


Parameters	Description
1 Dynamic IP address	Click this to enable IP device's DHCP function. It will acquire its WAN port IP address from a DHCP server within the same network. (You must have a DHCP server in order to enable this function.)
2 Use host name	Enter the host name to display in utility tools, ex IP Utility.
3 Static IP address	Click this to manually enter the IP address. 4 IP address: Enter the WAN port IP address. 5 Subnet mask: Enter the subnet mask of WAN port. If IP address is changed, adjust the subnet mask accordingly. 6 ISP gateway: Enter the IP address of the gateway (the router).

7 PPPoE	Click this when you connect IP device directly to the xDSL modem. 8 User name: Enter the user name of your xDSL account. 9 Password: Enter the password of your xDSL account. Note: You have to click the [Save Reboot] after you click the [Apply button] to let this IP device start xDSL connections.
----------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Click the **10** [Apply] button to confirm the settings or click the **11** [Reset] button to re-enter the parameters.

DNS

Click the [DNS] item to display the "DNS Server Settings Page". Refer to the table below for how to configure each setting.

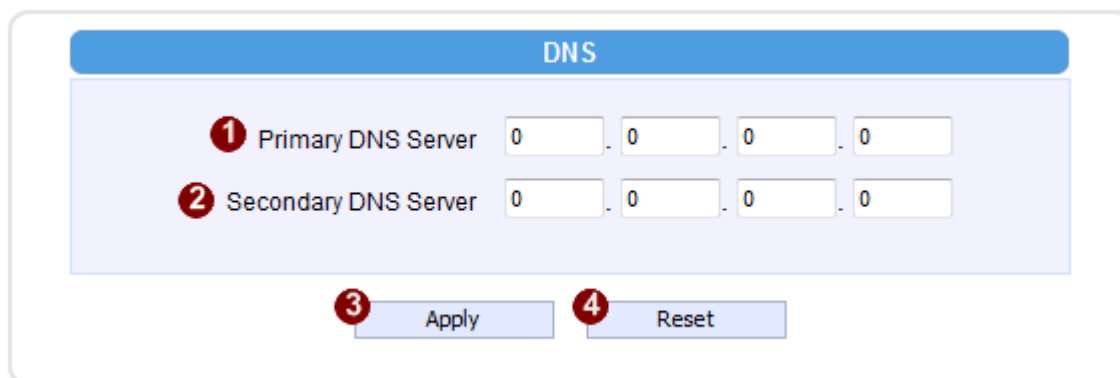


Parameters	Description
1 Primary DNS server	Defines the IP address of the primary DNS server. This is used for identifying this computer by name instead of IP address.
2 Secondary DNS server	The IP address of the secondary DNS server. It will be used once the primary DNS server fails.

Click the **3** [Apply] button to confirm the settings or click the **4** [Reset] button to re-enter the parameters.

DDNS

Click the [DDNS] item to display the “DDNS Server Setting Page”. Refer to the table below for how to configure each setting.

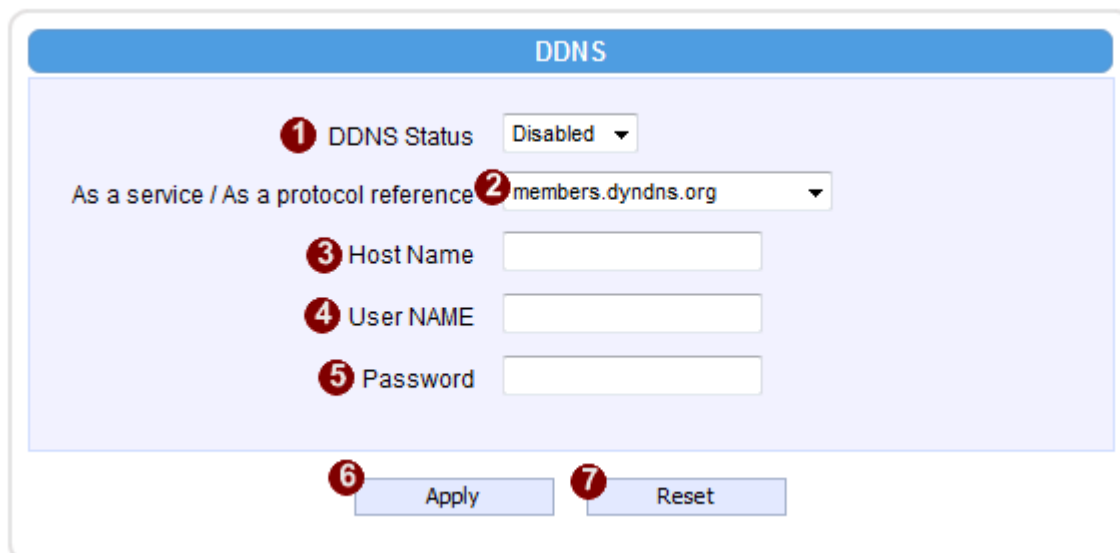

Parameters	Description
1 DDNS type	Click this to enable IP device's DDNS function. DDNS function enables user to connect to this IP device by domain name even if its IP address is not static.
Protocol / 2 Service Reference	Click one of the DDNS service providers. You can visit their website to get a DDNS service account for this IP device.
3 Host name	Enter the host name of your DDNS service account. (ex: xxxx.dyndns.org)
4 User name	Enter the user name to login your DDNS service account.
5 Password	Enter the password to login your DDNS service account.

Click the **6** [Apply] button to confirm the settings or click the **7** [Reset] button to re-enter the parameters.


Video & Audio

Click the  [Video & Audio] item on the “Setup Page”.

Please note that some elements may not appear on all models.

Stream Mode


This section determines how many streams are available from this device. There are three modes: Single, Dual or 4 Stream. **“4 Stream” mode is available only to 4 Megapixel models.**

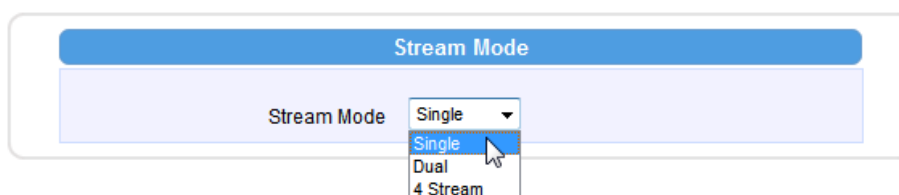

In single stream mode, resolutions available include 4 Megapixel 2032 x 1920 (for some models), Full HD 1920 x 1080, HD720 1280 x 720 and VGA 640 x 480.

In 4 Stream mode, there is a Standard View and a Positioning View. This image below shows the Standard View. This display shows where each crop window located is but does not allow you to change move it. To reposition the crop windows, click “Setup”.

4 Stream Mode – Standard View

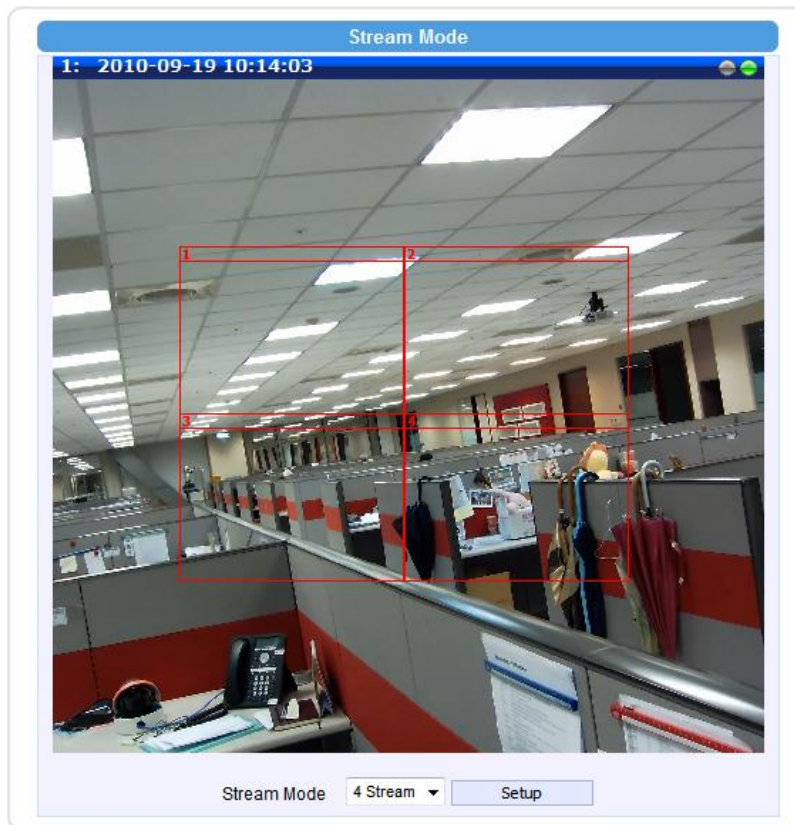


In Standard View you can see where the window for each channel is located. To edit cropping location, click “Setup”.

4 Stream Mode – 4 VGA Window Positioning View

In 4 VGA Window Positioning View, you may position each window to where you desire to view.


The current view is the 4M view area to allow you the most flexibility in positioning. Click and drag the top bar of each window to activate it and drag to place. The currently active window is highlighted in yellow, while the other windows are shown in red.

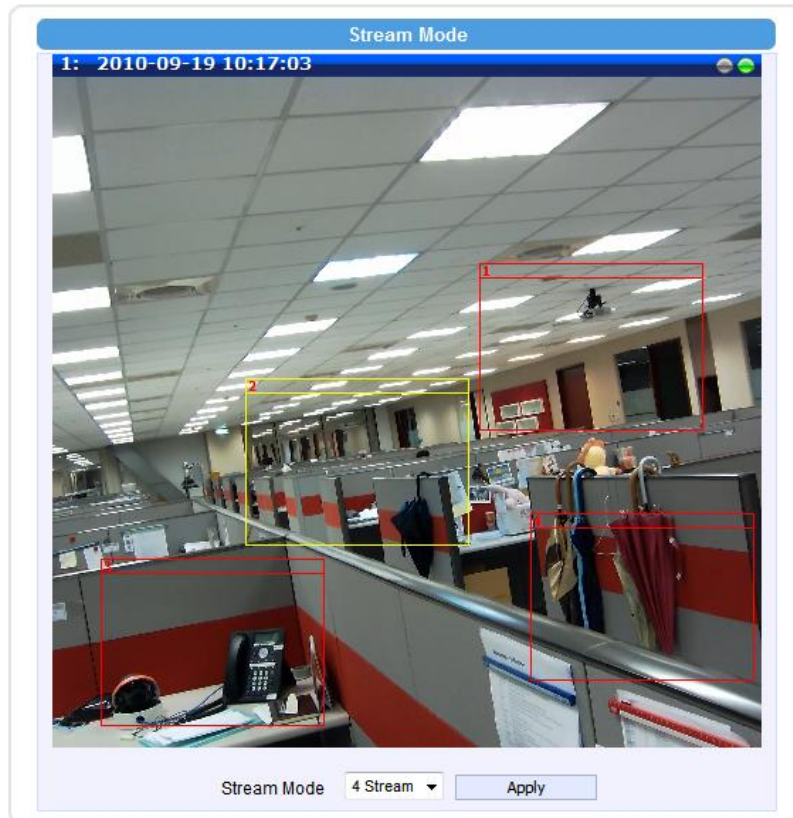

Camera Options

This item is available on **hemispheric camera** only.


This section determines how many streams are available from this device. There are six modes: Single, Dual, ePTZ, MD Preset, 6 Stream and Fisheye View.

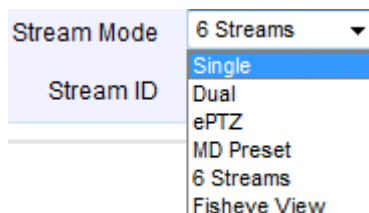


Single Mode



In single stream mode, there are two options you can choose depend on your device's mounting type- Ceiling / Wall. In Single Mode, resolutions available include Full HD 1920 x 1080 and HD720 1280 x 720.

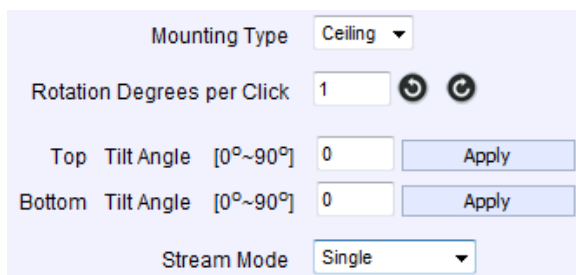In **Ceiling Mount**, you can see the double panorama view in pre-view windows. You can adjust the viewing angle via typing the rotation degrees.

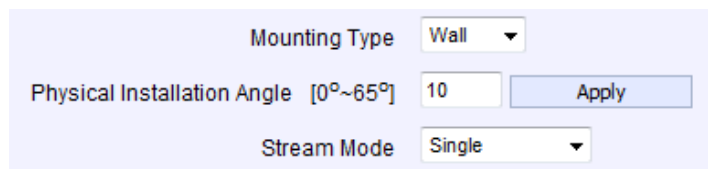

In **Wall Mount**, you can see the panorama view in pre-view windows. Adjust the "Physical Installation Angle" will do proper dewarping based on the newly defined center of the view.



Type	Description	Physical Installation Angle
	Not using the 10° Hemispheric Camera Wall Mount	0 degree
	With 10° Hemispheric Camera Wall Mount	10 degree

ePTZ Mode

ePTZ mode of Hemispheric Camera works in similar way as optical PTZ function in Speed Domes. As the camera receives commands from remote client, it changes the direction of the view or zooms in or out digitally. The stream coming out from the camera represents current viewing direction of the camera, not the panoramic view.


The resolutions are available include 4M 2032 x 1920, Full HD 1920 x 1080, HD720 1280 x 720 and 640 x 480.



If you are using hemispheric camera in ePTZ mode, this screen is available by clicking on PTZ button in the **live view screen**. Mouse PTZ is enabled at the same time.

You can configure up to 32 Zoom presets below. Just click Set, enter the name and move position to what you desire, then click set again. You can instantly ask the camera to go to that zoom and focus position by clicking on the Goto button.

Click Delete to remove this zoom preset point from camera memory.

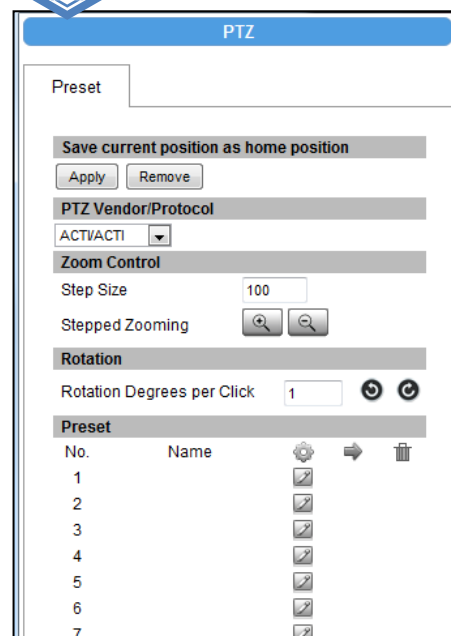

You can use ePTZ in live view by moving the mouse over video and clicking on the video anywhere you like. Wherever you click, that point will become new “center” of the view. This is how you “pan” and “tilt”. You also can rotate the view via PTZ panel if you like.



To zoom in or out under ePTZ mode, use the scroll wheel of the mouse

Preset Tour

After you set the Preset Point, the Tour function will be enabled. Please refer [Preset Tour](#),

Note: Home position has to be set again after changing the installation type, the motion detection configurations and PTZ configurations like preset points.

6 Stream Mode


6 Stream mode is very similar to multi-channel video encoder can act as 6 different VGA cameras, each pointing in different direction

One of the benefits of 6 stream mode is to focus only on regions that are important and discard the rest of them. It can help save bandwidth and storage space.

Please use the on-video controls (Mouse PTZ) to shift the VGA region to the desired location.



You also can rotate the view if you like

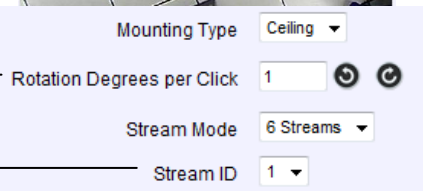

To setup other stream, please select in "Stream ID" list.

MD Preset Mode

Using MD preset mode, please set preset points in live view page first.


1. Live View → PTZ → Preset

Please use the live view on-video controls (Mouse PTZ) to shift the region to the desired location for each preset point.

Preset			
No.	Name		
1			
2			
3			
4			
5			
6			
7			

2. Setup → Video & Audio → Motion Detection

Set up the detail setting of motion detection.

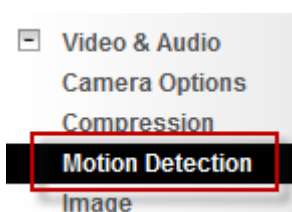

3. Motion Detection Setup

Press **Setup** to edit the settings. There are set six regions on ceiling mounting type and three regions on wall mounting type.

Region	1 Enabled	3 Sensitivity	4 Trigger Interval [s]	5 Trigger Threshold	6 Priority	2 Preset
1	<input checked="" type="checkbox"/>	70 ▾	1 ▾	10 ▾ %	4 ▾	01 ▾
2	<input type="checkbox"/>	70 ▾	1 ▾	10 ▾ %	5 ▾	01 ▾
3	<input type="checkbox"/>	70 ▾	1 ▾	10 ▾ %	6 ▾	02 ▾

7 Apply
8 Reset

01
 02
 03
 04
 05
 06
 07

STEP1: Click the **1** checkbox to enable motion detection for different preset point region.

STEP2: Choose the **2** preset point you want to use.

STEP3: Set the **3** sensitivity of motion detection region.

STEP4: Set the **4** interval time of motion detection. After a motion event is triggered, no more events will be triggered within this time in the same region

STEP5: Set the **5** trigger threshold of motion detection region. The larger this value, the larger the object size needed to trigger motion detection.

STEP6: Set the **6** priority of these preset point to trigger the motion detection. The higher number is the higher priority,

Click the **7** [Apply] button to confirm the settings or click the **8** [Reset] button to re-enter the parameters.

Fisheye View

In Fisheye View mode, camera will provide the panorama view image, and the available video resolution is 2032 x 1936.

Compression

Single Stream Mode:

Stream 1

1	Encoder Type	H.264
2	Resolution	N1280x720
3	Frame Rate	8
4	Video Bit Rate Mode	Constant Bit Rate
	Video Max Bit Rate	UNLIMITED
	Video Bit Rate	3M

Parameters	Description
1 Encoder Type	Select the encoder's compression type. MPEG-4 / MJPEG / H.264
2 Resolution	Select the video resolution of the camera between 4M (2032 x 1920), 2M 1080p (1920 x 1080), 1M 720p (1280 x 720) and VGA (640 x 480)
3 Frame rate	Select the available frame rate from the drop down menu.
4 Video Bit Rate Mode	Constant Bit Rate: The bit rate remains constant at all conditions, Video quality will be better when image is still. Large amount of motion or complex scene will degrade quality slightly. Variable Bit Rate: The video bit rate will vary based upon scene complexity and amount of movement. The quality will remain the same.
5 Quality (Variable Bit Rate Only)	When encoder type is MPEG4 or H.264, and video bitrate mode is "Variable Bit Rate" Select the quality value from High / Middle / Low
6 GOP Length (Variable Bit Rate Only)	When encoder type is MPEG4 or H.264. and video bitrate mode is "Variable Bit Rate". Select the Interval between two I-frames. This is also called GOP Length. (Group of Picture). Default value is one I frame per second. The maximum length of GOP is limited to 60.
9 Video Max Bitrate (Constant Bitrate only)	This puts a hard cap on the maximum bit rate allowed in any given second of video streaming. Assigning a limited bit rate may result in a few dropped frames rate when the stream data overflows the allowed bit rate. Doing so will also disable Bit Rate setting below.
10 Video Bitrate (Constant Bitrate only)	This is the target bitrate that the camera will attempt to provide when using Constant Bitrate mode. The actual value will fluctuate slightly based on scene changes.

Dual Stream Mode:

Stream 1

1 Encoder Type

H.264

2 Resolution

N640x480

3 Frame Rate

8

4 Video Bit Rate Mode

Variable Bit Rate

5 Quality

Middle

6 GOP 1 I-frame /

Second

Stream 2

Encoder Type

H.264

Resolution

N640x480

7 Frame Rate

30

8 Video Bit Rate Mode

Constant Bit Rate

9 Video Max Bit Rate

UNLIMITED

10 Video Bit Rate

3M

11 Apply

Reset

12

Parameters	Description
1 Encoder Type	Select the encoder's compression type. MPEG-4 / MJPEG / H.264
2 Resolution	Select the video resolution of the camera between 4M (2032 x 1920), 2M 1080p (1920 x 1080), 1M 720p (1280 x 720) and VGA (640 x 480)
3 Frame rate	Select the available frame rate from the drop down menu.
4 Video Bit Rate Mode	Constant Bit Rate: The bit rate remains constant at all conditions, Video quality will be better when image is still. Large amount of motion or complex scene will degrade quality slightly. Variable Bit Rate: The video bit rate will vary based upon scene complexity and amount of movement. The quality will remain the same.
5 Quality	When encoder type is MPEG4 or H.264, and video bitrate mode is "Variable Bit Rate" Select the quality value from High / Middle / Low
6 GOP Length	When encoder type is MPEG4 or H.264. and video bitrate mode is "Variable Bit Rate". Select the Interval between two I-frames. This is also called GOP Length. (Group of Picture) . Default value is one I frame per second. The maximum length of GOP is limited to 60.
7 Frame rate	Select the available frame rate from the drop down menu.

8	Video Bit Rate Mode	Constant Bit Rate: The bit rate remains constant at all conditions, Video quality will be better when image is still. Large amount of motion or complex scene will degrade quality slightly. Variable Bit Rate: The video bit rate will vary based upon scene complexity and amount of movement. The quality will remain the same.
9	Video Max Bitrate	This puts a hard cap on the maximum bit rate allowed in any given second of video streaming. Assigning a limited bit rate may result in a few dropped frames rate when the stream data overflows the allowed bit rate. Doing so will also disable Bit Rate setting below.
10	Video Bitrate	This is the target bitrate that the camera will attempt to provide when using Constant Bitrate mode. The actual value will fluctuate slightly based on scene changes.


Click the **11** [Apply] button to confirm the settings or click the **12** [Reset] button to re-enter the parameters.

4 Stream Mode:

Configuring compression settings in 4 stream mode is basically the same as configuring compression settings in other modes. The setting is the same across all 4 channels, but you may switch view of the individual channels by selecting the channel on top.

Video Compression

1: 2010-09-19 23:26:06



Stream-1

Encoder Type

H.264

Resolution

N640x480

Frame Rate

15

Video Bit Rate Mode

Constant Bit Rate

Video Max Bit Rate

UNLIMITED

Video Bit Rate


3M

Apply

Reset

Motion Detection

The section “Motion Detection” allows the user to configure the video motion detection system of the camera. Motion detection regions are based on the Stream 1. By default, all the regions are disabled.

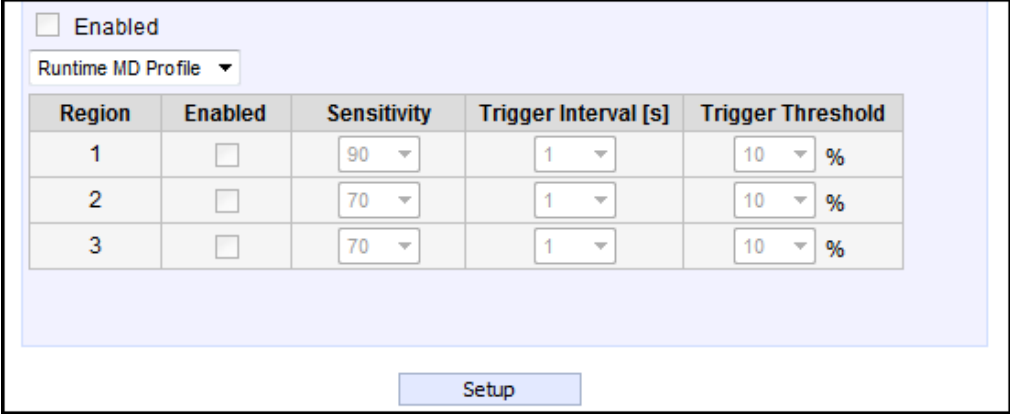

Region	Enabled	Sensitivity	Trigger Interval [s]	Trigger Threshold
1	<input type="checkbox"/>	90 ▾	1 ▾	10 ▾ %
2	<input type="checkbox"/>	70 ▾	1 ▾	10 ▾ %
3	<input type="checkbox"/>	70 ▾	1 ▾	10 ▾ %

Click on “Setup” and then check “Enabled” to adjust the motion detection regions or its parameters. **Microsoft Internet Explorer** browser is required to configure the motion detection regions.

There are three independently configurable motion detection regions in the camera. Each motion detection region has 6 configuration parameters:

- Enabled or disabled
- Location of the region
- Size of the region
- Sensitivity
- Trigger threshold
- Trigger interval

Enabled or disabled

Each of the 3 motion detection regions can be enabled or disabled individually. Look at the example: Only the region 1 is enabled while 2 and 3 are disabled. The disabled regions disappear from the video display.



Note that the number of the motion detection region is written in the upper left corner of the region.

Runtime MD Profile ▾		
Region	Enabled	Sensitivity
1	<input checked="" type="checkbox"/>	70 ▾
2	<input type="checkbox"/>	70 ▾
3	<input type="checkbox"/>	70 ▾

Location of the region

You can move the motion detection region anywhere on the field of view by dragging the top of the motion detection rectangle as shown on the image. The motion detection regions may even be overlapping if you like._



Size of the region

By dragging the lower right corner of the motion detection region you can change the size of the region. The maximum size of the region can even be as big as the whole screen.



Sensitivity

Sensitivity is the parameter that helps us distinguish actual moving targets (people, vehicles) from the slightly moving background, such as leaves of the trees waving in the wind. In order to avoid false alarms, we might want the camera be able to ignore small motion. The higher is the sensitivity level of the camera the smaller shift of the object is needed to trigger the alarm. For example, if the object within motion detection region has moved for about 1-3 pixels during two video frames, then such small motion will be discarded by camera if the sensitivity is low, and will still trigger an alarm if the sensitivity is high. In other words, you can think of sensitivity level as a **reversed speed limit** – the smaller is the sensitivity, the faster are the objects allowed to move without being detected.

The biggest challenge of motion detection configuration is to find the settings that do not produce false alarms and at the same time do not miss any actual intrusions. The rule of thumb is: **the sensitivity should be as high as possible while not producing false alarms**. The default sensitivity level of the cameras is 70 (on a scale of 0-100) and it is a good setting for most standard cases.

Trigger threshold

Look at the moving object entering the area of motion detection: although moving quite slowly, it caused motion activity – several pixel regions reported a motion that was faster than allowed “speed limit” of sensitivity (70).



The blue graph on the right side of the image shows how many percent of pixels within the motion detection

region were considered as “currently in motion”. The activity panel itself is a timeline – for each moment of time you can see the height of the blue bars. You may notice that at certain moment the tallest bars in the activity graph reached about 25% (a quarter of the total height in activity panel) – it means, 25% of this motion detection area were filled with moving pixels at that moment. By visual observation you can also see that the object standing inside the motion detection region indeed covers about 25% of its size.

Runtime MD Profile ▾

Region	Enabled	Sensitivity	Trigger Interval [s]	Trigger Threshold
1	<input checked="" type="checkbox"/>	70 ▾	1 ▾	10 ▾ %
2	<input type="checkbox"/>	70 ▾	1 ▾	10 ▾ %
3	<input type="checkbox"/>	70 ▾	1 ▾	10 ▾ %










What if the object is really small but moves rather fast (gets triggered by the current sensitivity level)? For example, we want to detect people but not the cat walking in the room. Although both people and cat may move with the speed that will trigger motion, they have different size of triggered pixels. For example, a human passing by the motion detection region will trigger 25% of pixels in that region while the cat would trigger only 2%. Since we want to have a real alarm in case of human or vehicle passing by while ignoring birds, cats, butterflies, mice, etc, we need a filter that can define how many percent of triggered pixels will be considered as a real alarm. This parameter is called **trigger threshold**. The default value of trigger threshold is 10%. It means, only the objects that are bigger than 10% of the motion detection region size and move faster than allowed by sensitivity level (70) will produce actual alarm.

How to choose the most optimal trigger threshold level? The rule of thumb, **keep the trigger threshold as small as possible while not causing false alarms by the moving objects that are not humans or vehicles.**

You can have different sensitivity level and trigger threshold level for each motion detection region.

In order to understand all of the above even better, please refer to the table below containing four possible combinations of settings using sensitivity level and trigger threshold percentage.

The objects listed in each cell will trigger an alarm under given settings:

	Low threshold (0-5%)	High threshold (5-100%)
Low sensitivity (0-65)	Big and fast  Small and fast 	Big and fast 
High sensitivity (65-100)	Big and fast  Big and slow  Small and fast  Small and slow 	Big and fast  Big and slow 


The camera's default sensitivity is 70 and threshold is 10%. By these default values, only the rabbit and the turtle would trigger an alarm while the butterfly and the snail would be ignored by the motion detection system.

Important: Please remember that changing the size of the motion detection region has an impact on the threshold – the bigger is the size of the motion detection region the smaller should be the threshold value if you want the same object size to trigger motion. For example, if you increase the motion detection region to twice the previous size, please remember to reduce the threshold to half its original value (from 10% to 5%). On the other hand, changing the location of the motion detection region has no impact on threshold.

Trigger interval

The last configuration item is the trigger interval. It is the time period from the beginning of the triggered event during which the all motion activities are ignored by the camera. This is designed to avoid needless repetitive reporting of the same intrusion. Trigger interval 20 seconds would mean that when the even happens, camera will take certain one-time actions and ignore the continuing activity in the motion detection region for 20 seconds. When 20 seconds are over, the camera will produce a new alarm if there are still action in the motion detection region, and take actions again.

There is one more item on the Motion Detection configuration page which was not explained above – the **Profile of Motion Detection**. Think of them as **Profile 1** (Runtime MD Profile) and **Profile 2** (Event MD Profile). It means that you can configure

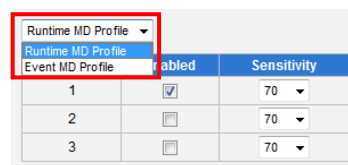

	Enabled	Sensitivity
1	<input checked="" type="checkbox"/>	70
2	<input type="checkbox"/>	70
3	<input type="checkbox"/>	70

two independent groups of Motion Detection regions with at most 3 regions in each group. Normally, the Profile 1 (Runtime MD Profile) is used as an active profile of the camera. However, in some cases it is possible to let the camera switch to Profile 2 by using the Event Handler system of the camera.

For example, you might want to have different motion detection parameters for day and night time. Then the two profiles become really handy. In such case, remember to configure the motion detection parameters for both profiles before moving on to configure the event response system.

After changing any of the items above, press **Apply** to save the changes. The Reset button undoes the changes that had just been made but not Applied yet.

Image

This section concerns the general video settings.

KCM-5111/KCM-5211/KCM-5311/KCM-7111/KCM-7211/KCM-3211 Models



1. **Video Flipping:** Check this box to flip the video up-down
2. **Video Mirror:** Check this box to mirror the video left-right
3. **Brightness:** Select the Brightness value. The higher the value, the brighter the image.
4. **Contrast:** Select the Contrast value. The higher the value, the sharper the contrast.
5. **Digital Noise Reduction:** Select ON or OFF to enable or disable this function. Enable this for smooth and clear image. Disable this if your scene contains many extreme details that may be smoothed over with DNR.
6. **Restore image settings to default:** When press this button, it will use the default image settings.

Click the [Apply] button to confirm the settings or click the [Reset] button to re-enter the parameters.

Other Models




1. **Video Flipping:** Check this box to flip the video up-down.
2. **Video Mirror:** Check this box to mirror the video left-right.
3. **Brightness:** Select the Brightness value. The higher the value, the brighter the image.
4. **Contrast:** Select the Contrast value. The higher the value, the sharper the contrast.
5. **Saturation:** Select the saturation value. The higher the value, the more saturated the image.
6. **Digital Noise Reduction:** Select the DNR value. The higher the value, the smoother and clearer the image.

7. **3D Noise Reduction:** Select ON or OFF to enable or disable this function. Enable this for smooth and clear image. Disable this if your scene contains many extreme details that may be smoothed over with 3DNR.
8. **Edge Enhancement:** Select the Edge Enhancement value. The higher the value, the sharper the image.
9. **Advanced WDR:** Select the WDR level. Options are: Disabled, Low, Medium, High, Highest.
NOTE: Advanced WDR is disabled and will not appear on screen if "Exposure Mode" is set to "Manual", see *Exposure / White balance* on page 56.
10. **Defogging:** Select the Defogging value. The higher the value, the clearer of image in foggy situation. If you want to disable this function, please choose value 0.
11. **Restore image settings to default:** When press this button, it will use the default image settings.

Click the [Apply] button to confirm the settings or click the [Reset] button to re-enter the parameters.

Day / Night

This section concerns the day and night switch timing for your camera.

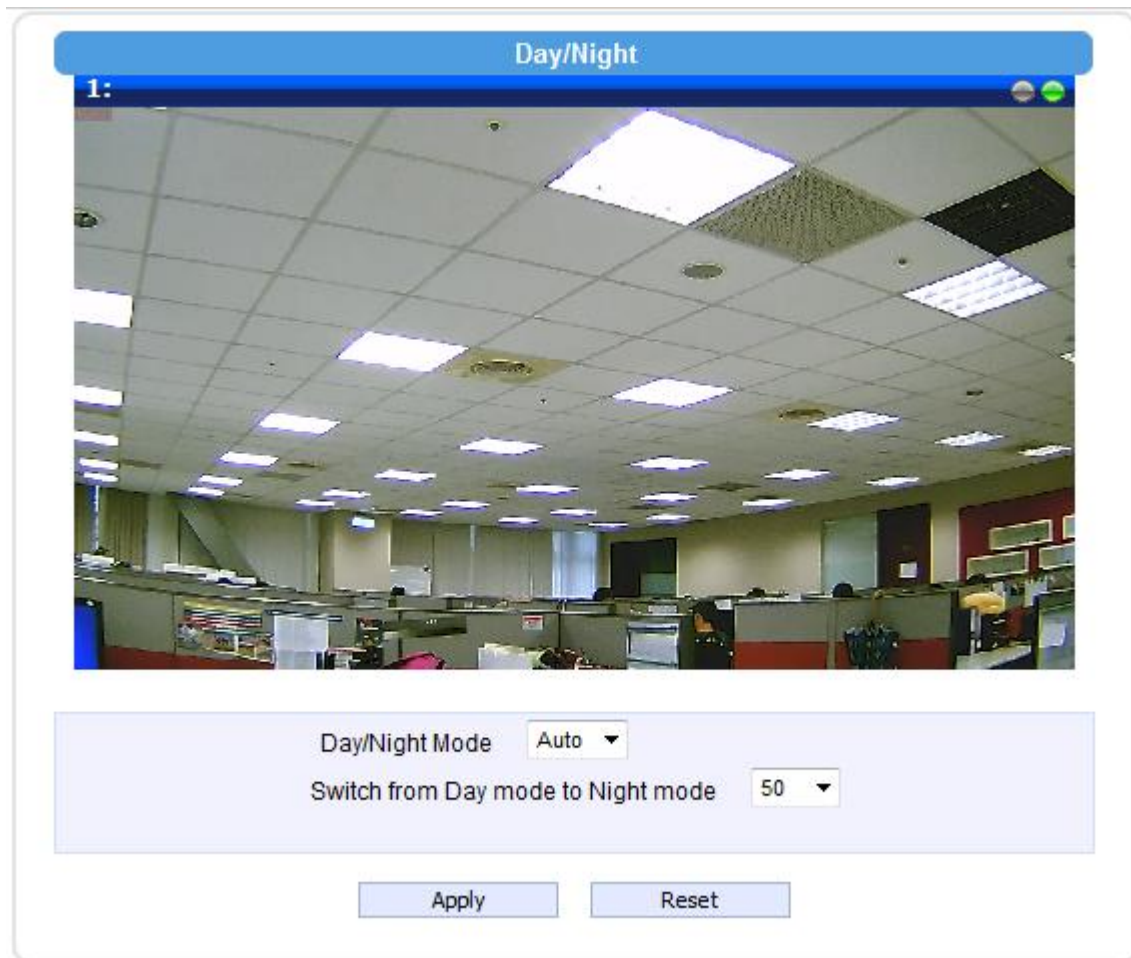


1. **Day / Night Mode:** The camera will change between day and night modes by default. You may command camera to stay in day or night mode here, or allow it to change automatically.
2. **Switch from Day mode to Night mode:** This value controls the level of light where camera switches into night mode. Increasing it will make camera switch to night mode at a darker illumination level.

Click the [Apply] button to confirm the settings or click the [Reset] button to re-enter the parameters.

Exposure / White balance

Configure Exposure and White Balance and Digital Noise Reduction for best image quality here. Some options will only appear under certain exposure / White balance modes. We will describe each in detail below.

Exposure Mode - Auto

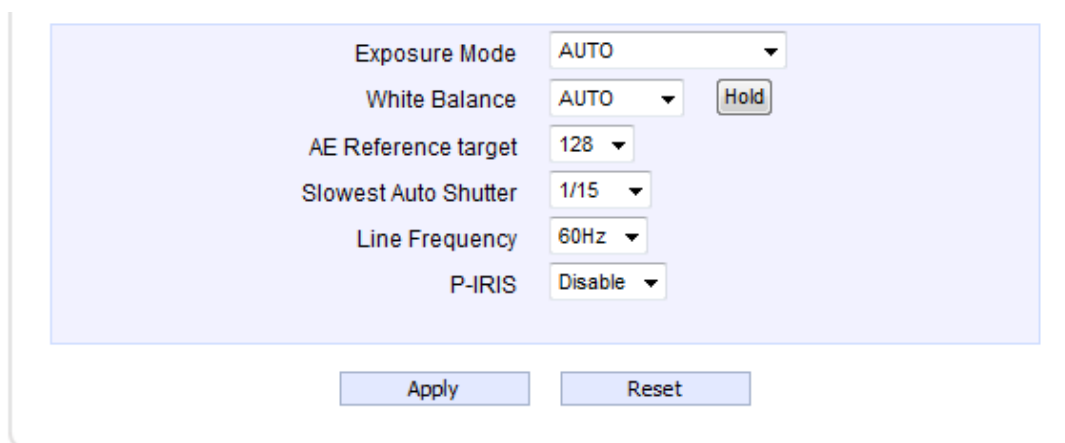

In Auto Exposure Mode, you control the image brightness by configuring the AE Reference Target and Slowest Auto Shutter.

AE Reference Target means the Auto Exposure reference target, which can be considered as the “Target Brightness on Sensor”. The camera will use several internal parameters to achieve best quality with reference to this. **The higher this value, the brighter the overall scene, and the more noise at night.**

Slowest Auto Shutter means the longest allowed exposure time for each frame. In extreme low light conditions, the exposure time is automatically increased to get more light into one image. If it extends beyond the interval between frames, (i.e. 1/30 second), then the frame rate will be automatically reduced. **Longer time in this value gives clearer images at night for slow moving objects, but more motion blur for fast moving objects.**

White balance weights the proportion of color in scene and recreates the most realistic color. Usually this function is performed seamlessly in the background in auto mode. In some cases you may want to fix the color proportions of your view. Wait until you like the color on screen. You can hold a piece of white paper in front of camera for reference, then wait until you like the current value to click on the “Hold” button to the right. This will lock the current value and enter the manual white balance mode.

Before Hold

White Balance	AUTO	Hold
---------------	------	------

Entering Manual mode with Hold White Balance

White Balance	MANUAL	Hold
R Gain	71	[1~255]
B Gain	142	[1~255]

Line Frequency is the power supply frequency. Select the right frequency to avoid image flickering.

P-IRIS (For Support P-Iris Lens Model)

P-IRIS	Disable
--------	---------

Enable P-IRIS function using P-Iris Lens. Otherwise, please disable it.

Exposure Mode – Shutter Priority

Exposure Mode	SHUTTER_PRIORITY	
White Balance	AUTO	Hold
AE Reference target	128	
Shutter Speed	1/30	
Line Frequency	60Hz	
Apply Reset		

In Shutter Priority Mode, the shutter speed is locked at the user defined value. Camera will compensate for different brightness with Iris size or signal enhancements. This is useful when the target moves very fast and has to be viewed with short exposure shutter time.

Exposure Mode – Iris Priority

Exposure Mode	Iris Priority	
White Balance	Auto	Hold
AE Reference target	128	
IRIS Control	F2.8	
Line Frequency	60Hz	
<div>Apply</div> <div>Reset</div>		


In Iris Priority Mode, Iris size is fixed to ensure sufficient depth of view. Camera varies exposure time shutter to compensate for brightness change.

Exposure Mode - Manual

Exposure Mode	Manual	
White Balance	Auto	Hold
Exposure Gain	40	
Shutter Speed	1/30	
IRIS Control	F2.8	
Line Frequency	60Hz	

In Manual Exposure mode, you may configure the shutter speed and exposure image gain yourself for optimum performance.

Audio

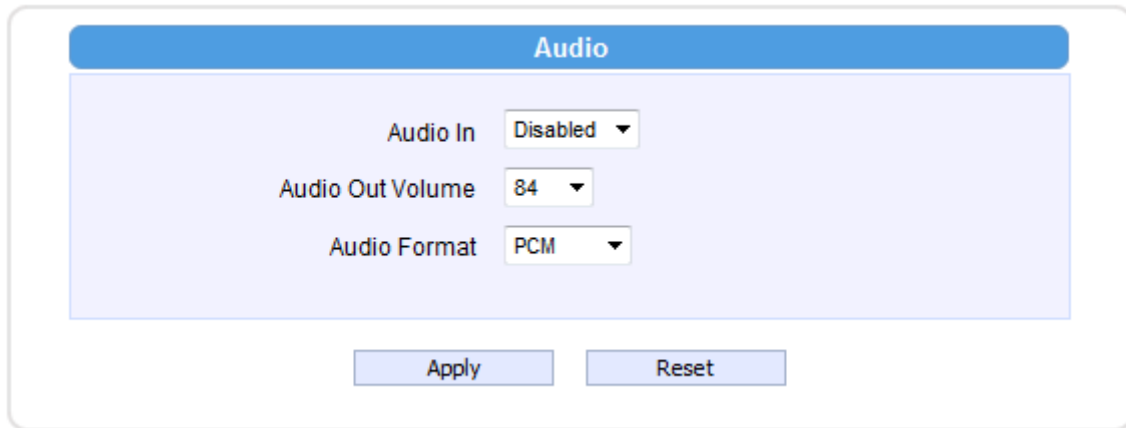The image shows a web-based configuration interface for audio settings. It features a blue header bar with the word "Audio". Below this, there is a light blue rectangular area containing three settings: "Audio In" with a dropdown menu showing "Disabled", "Audio Out Volume" with a dropdown menu showing "84", and "Audio Format" with a dropdown menu showing "PCM". At the bottom of the interface, there are two buttons: "Apply" and "Reset".

Audio	
Audio In	Disabled
Audio Out Volume	84
Audio Format	PCM

Apply Reset

Audio In - Enable or disable Audio In via the check box.

Audio Out Volume – Control the output volume of Audio Out here.

Audio Format – Select the audio's compression type, PCM / G.711A / G.711U.


Click the [Apply] button to confirm the settings or click the [Reset] button to re-enter the parameters.

OSD/Privacy Mask

OSD (On Screen Display) and Privacy masks are configured in this section. There are four regions available. Each may be used either as a Privacy mask or an OSD text.

Privacy Mask is not available in Dual Stream mode. Please disable Stream 2 if you wish to use Privacy mask / OSD.

OSD/Privacy Mask

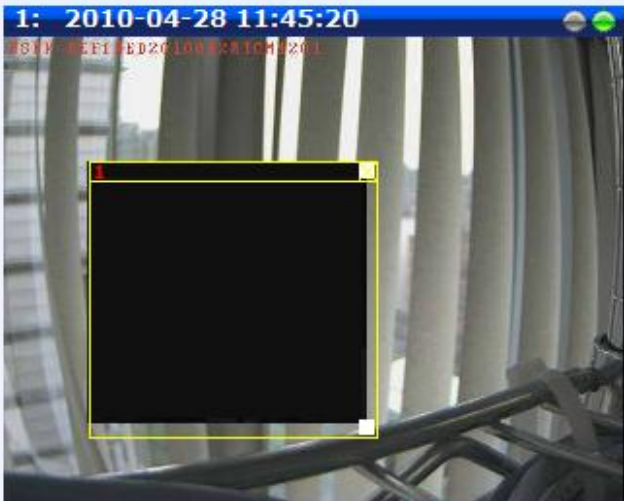

-	Region 1	Enable	<input checked="" type="checkbox"/>	Type	Privacy Mask
		Color		Setup	
		Black		<input checked="" type="checkbox"/>	

+	Region 2	Enable	<input checked="" type="checkbox"/>	Type	Privacy Mask
---	----------	--------	-------------------------------------	------	--------------

-	Region 3	Enable	<input checked="" type="checkbox"/>	Type	OSD
		Color	Transparent	Position	
		Red	100	Top	
		String	USER DEFINED [A~Z', '0~9', '/', ':', '"', max:16 char.]		
		Format	%U%YYYY%MM%DD%N		
< Format Notice >					

+	Region 4	Enable	<input type="checkbox"/>	Type	OSD
---	----------	--------	--------------------------	------	-----

Parameters	Description
1 Enable	Check this box to enable each OSD / Privacy mask region
2 OSD / Privacy mask	Each region can be in one of two types. OSD (On Screen Display) or Privacy mask
3 Color (Privacy mask)	This determines the color of the Privacy Mask Area. You may choose between Black, Green, Red and Blue.
4 Setup	Click this checkbox to enable Privacy mask area setup. Click and drag the adjust square at the lower right to change dimensions, click and drag the adjust column at the top to move. (Similar to Motion Detection Region)
5 Color(OSD)	This determines the color of the OSD Text. You may choose between Black, Green, Red and Blue.
6 Transparent	This number determines the level of transparency for this OSD Text. 1 means that the background between the texts will not be visible, while 100 means the background will show through the OSD text.
7 Position	Select the location where the text will appear in the image.
8 String	This is where you enter the user defined string (%U) as described in the next section. Total length cannot be more than 63 characters
9 Format	This controls what is shown in the OSD text. You can click the Format Notice to the corner for a full list of available parameters. The OSD text is primarily based upon this field.
10 Format Notice	Click here to see the syntax list of how to configure the OSD text.


Click the **11** [Apply] button to confirm the settings or click the **12** [Reset] button to re-enter the parameters.

Event

This section describes how to setup the Event Handler, which deals with how the IP devices respond to situations. Each IP device can have a maximum of 10 Event Rules. Each rule includes one single trigger, and one or many responses. Several types of responses are available. And there are multiple external servers for the device to interact with.

When setting up Event Handler, there are four types of settings. Event Server, Event Configuration, Event Rules and Manual Event

Click the  [Event] item on the "Setup Page".

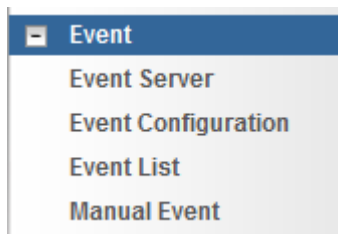

Event Server


Event servers define whom the device may interact with. They can be other servers or devices on the network, or even the camera itself. **Event Configuration** sets up a list of what to tell the other party during interaction. Event list lays down the rules and conditions about when to initiate which responses from which triggers. ***The options available for Event rules are selected from the event servers and event configurations.***

Event servers are classified as FTP servers, SMTP servers and HTTP servers

Event Server			
Type	Network Address	Ports	User Name
FTP Server Configuration	none	21	none
SMTP Server Configuration	none	none	none
HTTP Server 1 Configuration	none	80	none
HTTP Server 2 Configuration	none	80	none

FTP Server

FTP servers can receive snapshot or video uploads that are issued as part of the response from event handlers. You may setup one FTP server.

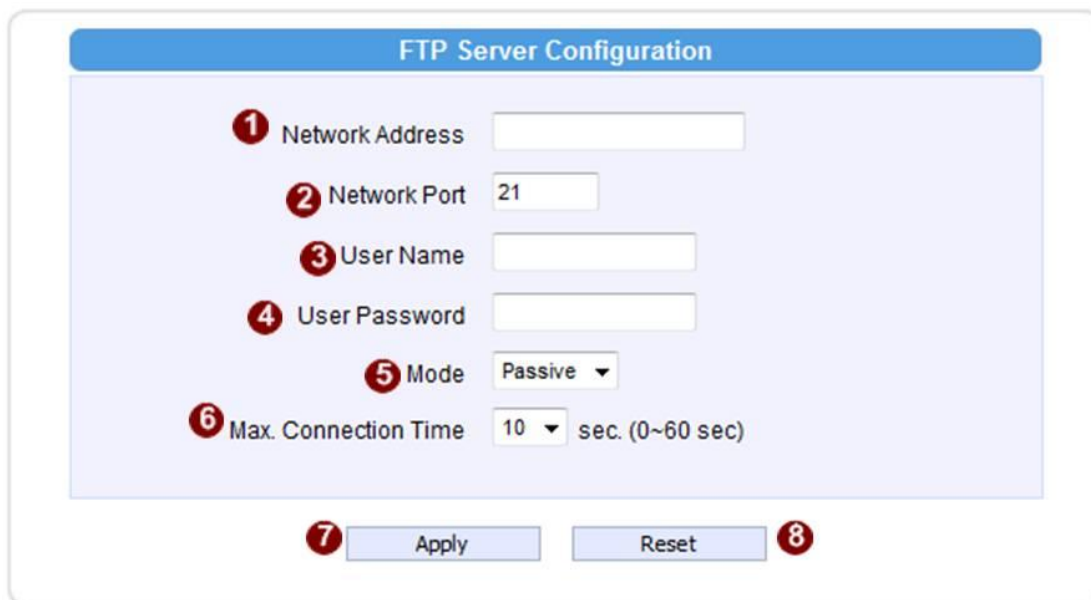


The image shows a screenshot of the 'FTP Server Configuration' window. It contains the following fields and controls:

- 1** Network Address: A text input field.
- 2** Network Port: A text input field with the value '21'.
- 3** User Name: A text input field.
- 4** User Password: A text input field.
- 5** Mode: A dropdown menu with 'Passive' selected.
- 6** Max. Connection Time: A dropdown menu with '10' selected, followed by the text 'sec. (0~60 sec)'.
- 7** Apply: A button.
- 8** Reset: A button.

To setup FTP servers, make sure to enter **1** the network address, **2** the Network (FTP) port, **3** the User Name, **4** Password, **5** Connection mode (Passive or Active) and **6** Connection time before timeout(in milliseconds). Click **7** [Apply] to use these settings or click **8** [Reset] to clear changes.

SMTP Server

SMTP servers can send email upon request from the IP device. The email can be a simple subject and text email, or attached with snapshot / video. You may setup two SMTP servers. The device will first attempt to send the message via the Primary email SMTP server. If the first attempt fails(after the Max connecting time), then the device will attempt to send via the secondary SMTP server. If the device sends email successfully via the primary SMTP server, then it will not use the secondary SMTP server.

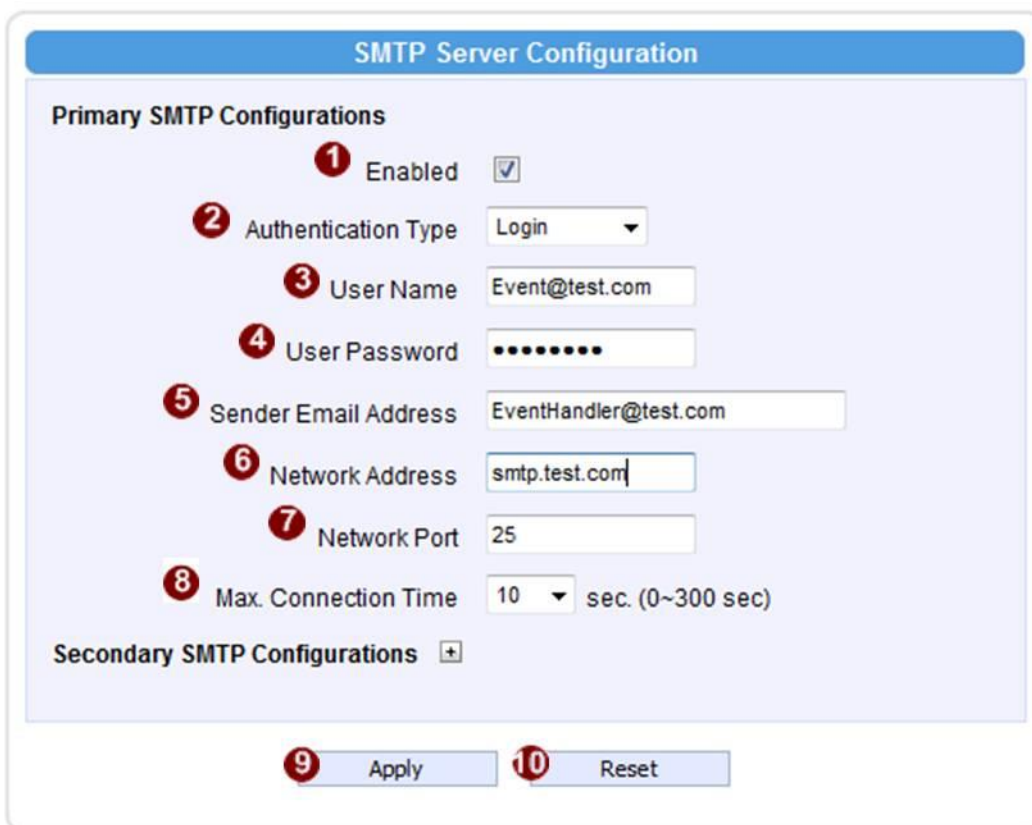

The screenshot shows the 'SMTP Server Configuration' window. It has a blue header bar with the title. Below it, the 'Primary SMTP Configurations' section is highlighted in light blue. This section contains eight numbered red circles (1-8) pointing to specific fields: 1. 'Enabled' checkbox (checked). 2. 'Authentication Type' dropdown menu (set to 'Login'). 3. 'User Name' text field (containing 'Event@test.com'). 4. 'User Password' text field (masked with dots). 5. 'Sender Email Address' text field (containing 'EventHandler@test.com'). 6. 'Network Address' text field (containing 'smtp.test.com'). 7. 'Network Port' text field (containing '25'). 8. 'Max. Connection Time' dropdown menu (set to '10' seconds, with a range of '0~300 sec' shown). Below the primary configurations is a 'Secondary SMTP Configurations' section with a '+' icon. At the bottom of the window are two buttons: 'Apply' (labeled with red circle 9) and 'Reset' (labeled with red circle 10).


To setup SMTP servers, make sure to **1** enable the SMTP account and **2** choose the proper Authentication type. There are many types available. The default is Login. We recommend you to use Auto Detection. Available authentication types include: Auto Detection, None, Login, Plain, Cram MD5, Digest MD5 and PoP Relay. Please also enter **3** the User Name, **4** Password, **5** the email address displayed as sender (can be different than the user name), **6** Network (SMTP server) address, **7** Network (SMTP server) Port number and **8** Max Connection time before timeout (in **seconds**). Click **9** [Apply] to use these settings or click **10** [Reset] to clear changes.

HTTP Server

HTTP CGI servers are programs that run on web sites or many devices. They can be custom programmed to perform a large variety of actions based upon the input. You can define which CGI server to connect to here, and the user / password required to log into the target server. The actual message / command is setup in the Notification messages / URL commands section. You may define two separate CGI servers.

IP devices are also CGI servers. This means that IP devices can now issue commands to each other, which creates endless possibilities for highly coordinated response. The IP device can also give a loopback command to itself, in effect changing almost all possible settings dynamically. For detail on the commands used to control the cameras, please contact your customer representative.

An example will help you gain a better sense of how to utilize this unique function. Camera A is a fixed camera that looks at a corridor leading to the main hall. It has a motion detection window located near the point where the corridor arrives at the large hall. Camera B is a PTZ camera located in the hall, which is usually left on auto-tour patrol. When motion activity in the motion detection region triggers MD1 in Camera A, this then in turn activates an event rule in Camera A that gives out a command to Camera B. Camera B would then swivel to the preset point where the corridor leads into the entrance and switch to higher bit rate to temporarily provide clearer image. After the event ends, Camera B will go back to its normal routine in lower bit rate.

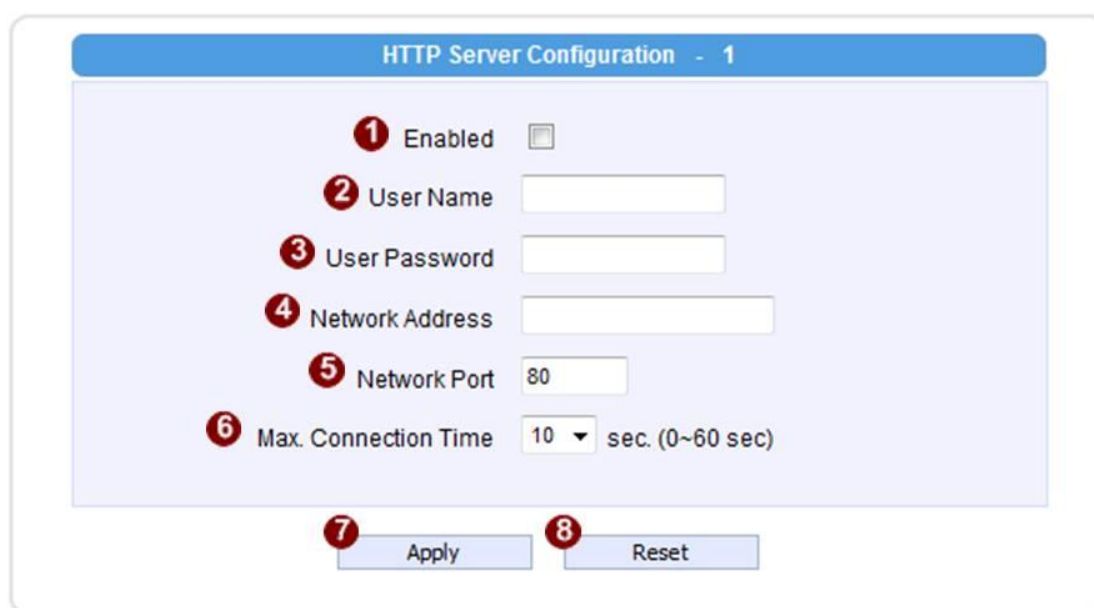


To setup HTTP servers, make sure to **1** enable the HTTP server, **2** enter the user name, **3** the user password, **4** Network (HTTP Server) address, **5** Network (HTTP Server) port number and **6** Max connection time before timeout (in seconds). Click **7** [Apply] to use these settings or click **8** [Reset] to clear changes.

Event Configuration

Event configurations are the responses to be performed when an event is triggered. For most types of responses, you can create several different preset responses, then mix and match in event rules. Some responses are not supported in all IP devices (e.g.: DO, PTZ). Event Motion Detection profile is also a triggerable response, but the parameters are defined through the Video Adjust page, not in Event page.

The configurable responses are classified as Digital I/O ports, Notification messages, Upload Image / Snapshot, Send URL Commands and go to PTZ Presets.

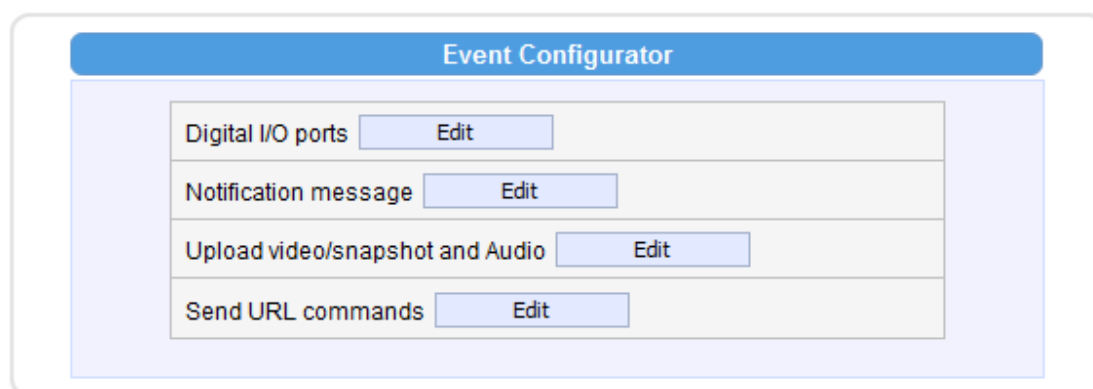


Digital I/O ports

Digital I/O ports (selected models only) read and control the voltage difference in the circuit, and respond to it. They are useful in connecting to a wide variety of devices. D/I is a trigger, while D/O is a response. Both are setup here. Both have a low voltage state and a high voltage state, noted as 0 and 1.

Trigger Interval: How does it work?

When a motion is detected or the device receives a DI trigger, usually users want the camera to stay on high alert for a minimum duration of time before returning to normal mode. This duration is controlled by setting the **trigger interval** value. During this time, the device will NOT respond to a second trigger. The device will stay in the triggered state for as long as the trigger continues to be effective. So the Trigger interval only limits the minimum amount of time the device will spend in the triggered state. Below are sample diagrams on trigger-response mechanism.

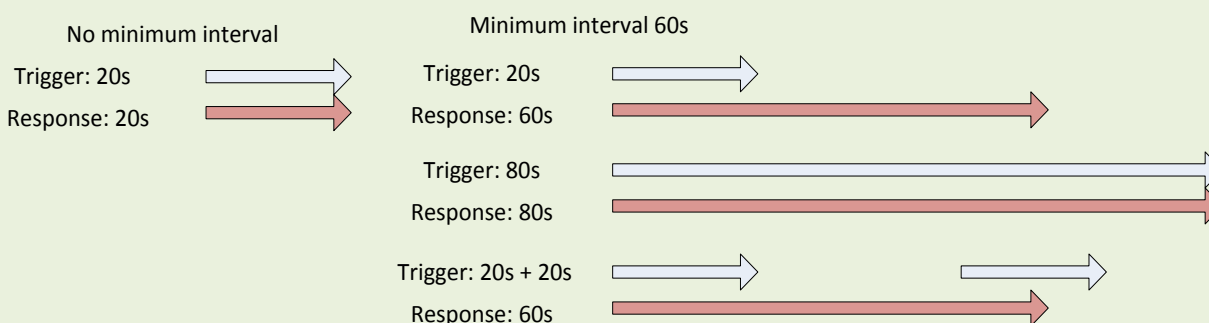

Digital I/O ports

Digital Input Port

Port	Active Level	Interval(0~86400 seconds)
DI 1	1 0 ▾	2 0

Digital Output Port


Port	Active Level	Interval*(0~86400 seconds)
DO 1	3 1 ▾	4 0


*: When 0, the digital output port stays at active level until the associated event becomes inactive

5 Apply
6 Reset

DI: To setup DI, please define the 1 Active level as 0 or 1. If the active level is set as 1, then camera will consider high voltage difference a trigger, which can be used to initiate other events.

The event will end when the DI voltage goes back to 0. 2 Interval determines the minimum delay that must pass before the IP device will accept another trigger from DI (in seconds). 0 means there is no minimum delay limit.


DO: To setup DI, please define the  Active level as 0 or 1. If the active level is set as 1, then camera will change the output voltage to high when this response is activated by an event rule.

The voltage will go back to low when the event ends.  Interval determines the minimum duration of each DO response(in seconds). DO will remain at the active level during this time, and if another event triggers DO before the end of the first DO, the second trigger will no take effect. 0 means there is no minimum duration.

Notification message

*Pre-requisites: **SMTP server / HTTP CGI server setup.**

Notification messages may be sent to either an email or a HTTP CGI server. If sent to a CGI server, it works the same as an URL command, but it does not allow a second message at end of event. You may configure up to three preset messages. You can configure a message, but disable it. This will allow you to keep the settings without using it, which will be useful in testing and troubleshooting.



To setup Notification Messages, make sure to **1** enable the message, then **2** determine what type of message to send (HTTP CGI or email).

If you are sending to CGI server, you need to enter the CGI path **3**, the URL command itself **4**, and an optional message **5**.

If you are sending email **7**, please enter the recipient E-Mail address **8**, the email subject **9**, and the body message **10**. Click **11** [Apply] to use these settings or click **12** [Reset] to clear changes.

Upload Video/snapshot

*Pre-requisites: **SMTP server / FTP server / HTTP CGI server setup.**

IP devices may send video recording / snapshots to your chosen server upon event. Video will be in .RAW format, while snapshots will be .JPG files. You can define up to three group of settings to upload video/snapshot. Snapshots can be sent to FTP / HTTP CGI and via Email, while video can only be uploaded to FTP or HTTP CGI servers. If Audio in is enabled in device, the uploaded video will include audio.

The parameters needed to setup this function are different for each task combination (snapshot / ftp or video / HTTP... etc), and are explained below:

Enable						UI
						Enable Message 1 <input checked="" type="checkbox"/>
Upload Media Type	Snapshot			Video		Upload Media Type <input checked="" type="radio"/> Snapshot <input type="radio"/> Video <input type="button" value="Test"/>
Upload Media to	Email	FTP	CGI	FTP	CGI	Upload Media To E-MAIL ▼
Upload Period	Y	Y	Y	Y	Y	Upload Period 0 (0~86400 seconds)
Image during Upload Period	Y	Y	Y			Images during Upload Period 0 (Use 0 for maximum number of images)
Pre-Buffer Time				Y	Y	Pre-Buffer Time 0 (0~3 seconds)
Image File Name	Y	Y	Y	Y	Y	Image File Name Front_Door_%YYYY_%MM_%DD naming rule
Upload Path	*	Y	Y	Y	Y	Upload Path /Event_Snapshot naming rule
CGI Path & Program			Y		Y	CGI Path & Program
E-Mail Recipients	Y					E-Mail Recipients using "," for multiple addresses
Subject	Y					Subject Front Door Snapshot
Video Source	Y	Y	Y	Y	Y	Video Source 1 ▼

Enable Video/snapshot checkbox: this decides if this rule is in effect, or disabled. Sometimes it is useful to keep the settings, but not to enable it for troubleshooting purposes.

Upload Media to: these define the task at hand, and change the field that needs to be filled out.

Upload Period: IP device will provide video/snapshots for the number of seconds here. It will stop uploading video/snapshot at the end of this period. If you have video management software recording from this camera at the same time, the normal recording through NVR will not be affected, and goes on through out the event period and afterwards. But the special upload session will end as the event ends.

Image during Upload Period: This is used only by snapshots. This tells the camera how many snapshots it should attempt to capture during the Upload Time. If this value is set to 0, then the IP device will attempt to capture as many snapshots as possible. Depending upon the device loading, the number of snapshots taken may not reach the number you specified.

Pre-Buffer Time: This is only used by video. If this is set to more than 0, then the IP device will start to buffer video in its internal memory. The maximum pre buffer is 3 seconds. When an event requires video upload, the IP device will first upload the video taken right before the event then keep uploading until it reaches the upload time.

Image File Name/ Upload Path: You will need to specify rule for file names and upload paths (upload path is not needed for Email. Just put a slash "/" in the field). The rules contain flexible parameters. A sample rule and corresponding filename will look like this:

Front_Door_%YYYY_%MM_%DD@%hh%mm%ss

Front_Door_2009_10_12@195037.JPG

Upload Path folders may also be named dynamically. For the IP device to create folders on FTP and HTTP CGI servers properly, your FTP/CGI account will need to have permission to create folders. For syntax on auto naming, please see online help or the inset box at the end of this section.

The symbol "%" cannot be the first character in filename or upload path. Please use either an alphabet or a number as the starting character. For Upload Path, be sure to start and end with a backslash "\". An example will be : \Backgate%MM%DD\

CGI path & Program: Some CGI servers may require special info and settings. Please refer to CGI server designer for this section. IP devices do not allow upload of Snapshots / Video into their embedded CGI servers.

E-Mail Recipient / Subject: When uploading video/ snapshots via email, these information are required.

Video Source: Choosing the video source from video 1 or video 2.

Auto Naming Rules for Files and Folders:

To properly track images and videos, a well thought out naming rule is necessary. There are a number of automatic variables available to design a proper naming system, which may be used both on files and folders.

Symbol	Description	Example
%YYYY	4 digits for year	2009 for year 2009
%YY	the last 2 digits of 4 digits year	09 for year 2009
%MM	two digits for month. 01~12	01 for January
%DD	two digits for date. 01~31	01 for the 1st day of a month
%hh	two digits for hour. 00~23	
%mm	two digits for minute. 00~59	
%ss	two digits for second. 00~59	
%W	a space character. ' '	' '
%N	camera name	camera-1
%Y	File serial counter. It starts from 1 in every uploading task. The counter will be increased by 1 for next uploading file.	1,2,3,4,5,...

Send URL commands

*Pre-requisites: **HTTP CGI server setup.**

Send URL commands

Send Command 1 to

HTTP CGI 1

Test

Command as event is triggered

/cgi-bin/cmd/encoder?PTZ_PRESET_GO=1

including path of CGI program [max. 119 characters]

Command as event becomes inactive

/cgi-bin/cmd/encoder?PTZ_PRESET_GO=2

including path of CGI program [max. 119 characters]

Send Command 2 to

HTTP CGI 1

Test

Command as event is triggered

in/cmd/encoder?VIDEO_BITRATE=3M&VIDEO_

including path of CGI program [max. 119 characters]

Command as event becomes inactive

/cgi-bin/cmd/encoder?VIDEO_BITRATE=750K&

including path of CGI program [max. 119 characters]

Send Command 3 to

HTTP CGI 1

Test

Apply
Reset

URL commands can be sent to HTTP CGI servers upon event. This provides the possibility of highly intelligent response upon event. IP devices and many other devices also have embedded CGI servers that may be controlled.

When Event Handler sends an URL command, it will send one set of command when the event is triggered, and another as the event becomes inactive. Depending on the CGI design, the URL commands may be able to be stringed together, and multiple commands may be issued in a single line.

An example would be when the access control device at the entrance detects an entry, this device provides a DI signal to the PTZ camera, and triggers an event. This event then sends a loopback command to the PTZ Camera itself (by setting its own IP as the HTTP CGI server). The PTZ Camera then moves to a preset location, stays until the event is over, then move back to another location. At the same time it moves to the preset location, it increases the bitrate from 750k to 3M, and the frame rate from 4 fps to 8 fps. The bitrate / fps changes are reverted at the end of event.

Event List

You may define a maximum of 10 Event rules, which will be shown in abbreviated form in the Event List panel. It will display under each Event ID, the days of the week it will be active, the start time and duration of the active period, the type of the source of trigger, and the actions used in the response. If the row is greyed out, this means the rule is currently not enabled and stays inactive.


Event Rule					
ID	Week Day	Start	Duration	Source	Action
1	1234567	00:00	24:00	NIGHT	VPROFILE
2	12345	08:00	20:00	SCH	DO1
3	1234567	00:00	24:00	NONE	NONE
4	1234567	00:00	24:00	NONE	NONE
5	1234567	00:00	24:00	NONE	NONE
6	1234567	00:00	24:00	NONE	NONE

There are several parts to the Event rule:

When is it active?

You may choose to enable the rule or not ¹. The settings will be kept in internal memory even if the event rule is disabled. Select the days in a weekly cycle ² in which this rule and schedule is active.

Determine the ³ start time and ⁴ duration of the active period. For example, a rule that lets motion detection trigger snapshot uploads to FTP would only take place after 19:00 each day for 12 hours. Outside of this time the rule will not be active.

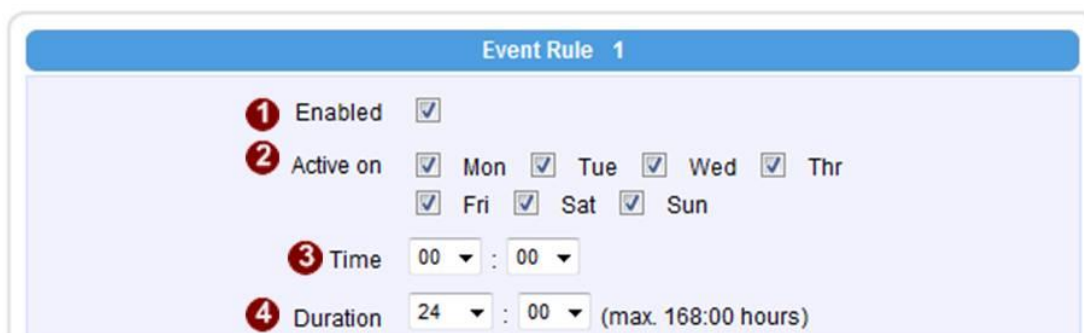

Event Rule 1

1 Enabled ☒

 
2 Active on ☒ Mon ☒ Tue ☒ Wed ☒ Thr
☒ Fri ☒ Sat ☒ Sun

3 Time 00 : 00

4 Duration 24 : 00 (max. 168:00 hours)

How is it triggered?

Events may be triggered by several sources:



Triggered by Switch to night mode ▼

You may also ask the event to be repeatedly triggered during this scheduled time. The interval is determined in minutes. You may use this with email / FTP upload to take snapshots at regular intervals.

DIs: For selected models only, the IP device may be triggered by Digital Input.

Motion: You may trigger the event if one or many Motion Detection regions encounter a motion trigger. Trigger from any of them will initiate the event. The duration of event will be the same as the MD trigger length, or the Trigger interval time, defined in the Motion Detection section on Video Adjust page.

Video Loss: This is available for video servers only. When the analog video in is lost, the video state will become “lost”, and return to “normal” only until device receives analog video signal. A common scenario is for Video Server to send email to administrator when video is lost, and activate DO signal to alarm that persists until the analog signal is restored.

Switch to Night mode: This is available to selected models only. When camera changes between day and night modes, the embedded event handler will notice this change, and may act upon this information.

Potential uses include changing the motion detection profile to another set of Event MD parameters. By having two sets of parameters each optimized for day and night, this provide better overall accuracy in both day and night conditions. Some night time only MD regions may

also be activated this way. The event period will end when the camera returns to day mode, which will then reset the camera to the original settings.

Device boots completely: This will trigger the event responses once the device boots up. You can use this to create a notification system that keeps record of when the device has been rebooted via email.

Reboot device: This triggers the event response when the device is shut down via web UI "Save and Reboot". Use this to keep record of when was the device setting edited. Note that this will not take effect when the device is unplugged, as this is not normal shutdown.

What responses will occur?

Response To		
<input type="checkbox"/>	Digital Output	
<input type="checkbox"/>	Send notification message	
<input type="checkbox"/>	Upload video/snapshots	
<input type="checkbox"/>	Change Motion Detection Profile	
<input type="checkbox"/>	Send URL command	
<input checked="" type="checkbox"/>	Change to Night Profile	

Digital Output (selected models only): This is an useful link to other devices. Click to include this in the response for this rule.

Send notification Message: Select from the three pre-defined messages which you've setup in the Event Configuration section. You may enable multiple messages at the same time. For sending Email, please limit the recipient to one per event rule. If you need to send email to more than one recipient, please use separate event rules triggered by the same trigger.

Upload video/snapshots: Select which of the event configurations to include in this response set. If you are sending email via upload video and sending notification message at the same time, the system will automatically merge the two emails into one. The subject and image will be based upon the Upload snapshot Event configuration enabled, but the message in the body text will be based upon the Notification messages.

In general, please stick to the "one email per event rule" limit for best performance.

Change Motion Detection profile: This will switch the profile of the selected Motion Detection region from Runtime profile to Event profile. The profile will return to runtime settings at the end of

this event. You may program one motion detection region to be disabled at runtime, but enable it with event handler under some circumstances.

Send URL command: Select the URL command to include in the response set. Two different commands will be sent at the time when the event is triggered and untriggered.


Change to Night Mode (Selected models only): For some models, you may force the Camera into Night mode. The camera will return to its previous setting (whether auto or forced day/ night) upon the end of the event.

Go to a preset point: if the device is a PTZ camera, and the Go to Preset point Event Configuration is setup, then you may include this in the response section of the event rule. The camera will return to the position right before the event starts when the event is untriggered.

Be sure to do Save and Reboot after you've updated the event settings. Only then will the settings be committed to physical memory. You may lose the settings to power loss or other situations if you do not do this step.

Manual Event

You may select one event in the Manual Event area below the event list to be triggered via web UI.

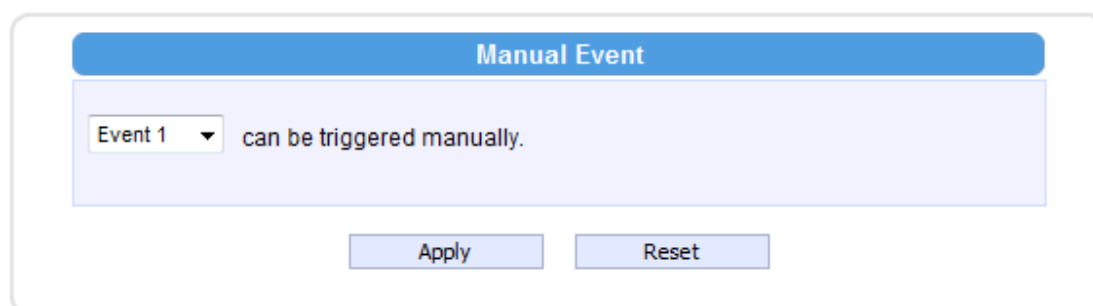


Once selected, the trigger button on the video display screen will show as clickable. Click to trigger the selected event. This is useful during event rule testing.




Local Storage Management

The KCM-Series devices that come with built-in local storage capability will have the [Local Storage] item shown in the “Setup Page” when the mass storage has been inserted into the storage drive slot of the device.


Under [Local Storage] item it is possible to manage the storage itself and the files that are stored there. In order to define the schedule or event rules that initiate or stop the recording process onto local storage, please refer to the chapter “Event Handler with Local Storage” on page 91.

Click the  [Local Storage] item on the “Setup Page”. There will be the list of 4 items – Status, Utilities, Setup and File Management. As long as the inserted mass storage has not been formatted or mounted yet, the File Management item is grayed out and cannot be accessed.

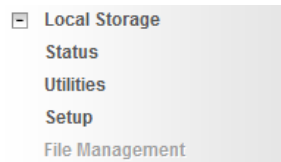

Status


When the mass storage has not been formatted or mounted yet, the camera would not know the status of the storage, and the output would be as follows:

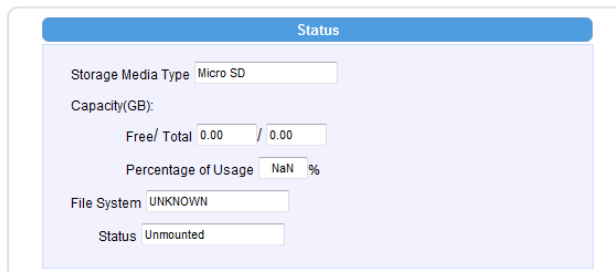

The screenshot shows the 'Status' page with the following fields:

Status	
Storage Media Type	Micro SD
Capacity(GB):	
Free/ Total	0.00 / 0.00
Percentage of Usage	NaN %
File System	UNKNOWN
Status	Unmounted

If the mass storage has been formatted or mounted already, the Status page will show the details of the storage:

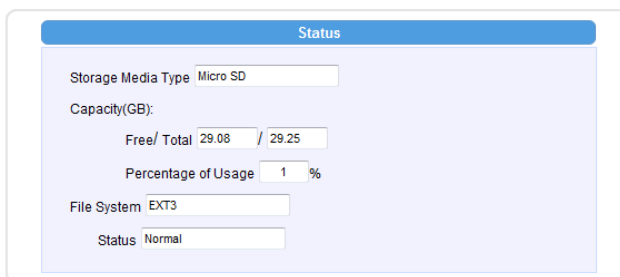

The screenshot shows the 'Status' page with the following fields:

Status	
Storage Media Type	Micro SD
Capacity(GB):	
Free/ Total	29.08 / 29.25
Percentage of Usage	1 %
File System	EXT3
Status	Normal

In case of IP cameras with MicroSDHC, the Storage Media Type will show "Micro SD".


In case of video encoder with 2.5" SATA hard disk, the Storage Media Type would show "HDD".

The capacity of the disk is shown in Gigabytes.

The file system is Linux based EXT3, which is different from Windows based PC file systems. If you remove the storage from the camera and plug it directly to Windows based PC, it may not be able to read its content. The chapter File Management explains the correct ways of accessing files of the local storage.

Utilities


The “Utilities” are responsible for managing the storage itself rather than the files on the storage. There are three utilities – Mount, Format and Scan.

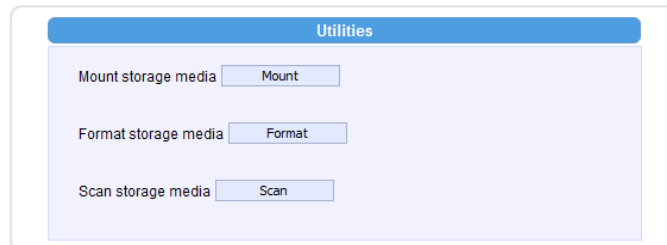

Mount




When the Mount storage media button shows “Mount” button then it means that the mass storage has been inserted to the camera, but the connection between camera and the storage has not been established yet. By pressing the “Mount” button, the storage becomes active. It is then possible to check the Status of the disk, write or read data on the disk, remotely access the storage by Web Configurator or FTP client, etc.

When pressing the “Mount” button, the mounting process will start.

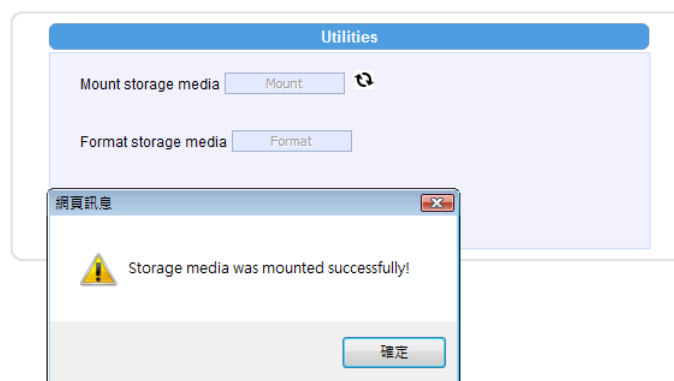

Unmount


Once the drive has been mounted, it can later be unmounted by pressing “Unmount” button, if necessary.

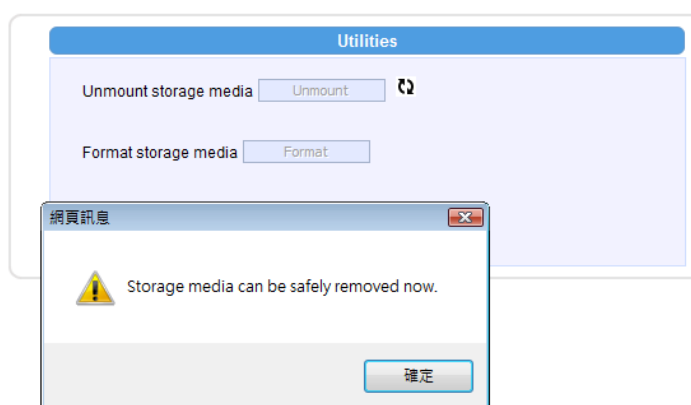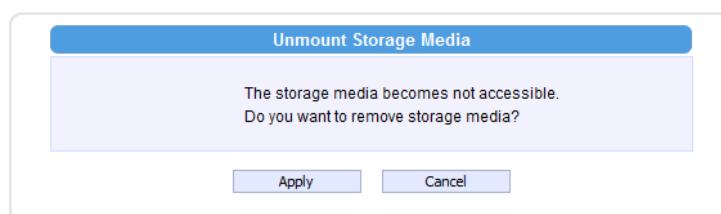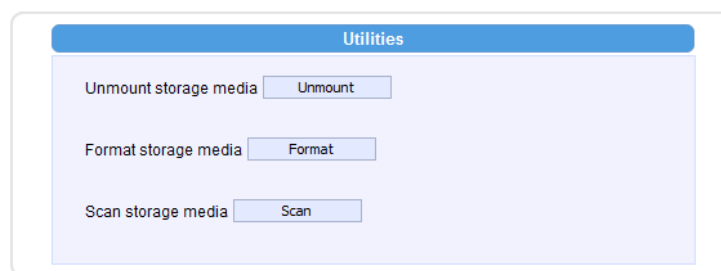

That Unmount function is used when the camera is to be shut down for maintenance or when the mass storage has to be physically removed for some reason. The purpose of unmounting is to protect the currently processed data on mass storage at the moment of removal of the storage. If the local storage is being used by camera and some videos or snapshots are being recorded to the disk, then the sudden shutdown or removal of the disk without unmounting may corrupt the file that currently being used by the camera. The rest of the files are not influenced in any way. Please note that “Save&Reboot” function of the camera also does unmounting automatically for the user.

Mount Failure


If the inserted disk's file system is not EXT3, then the Mounting would fail, as follows.

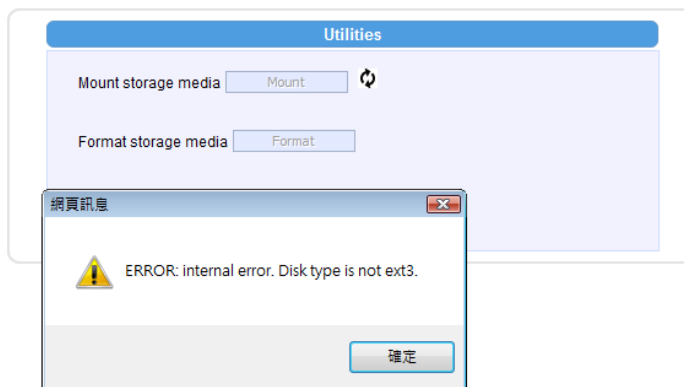


The common reason is that the disk may have previously been used in other file systems, such as Windows based PC or photo camera. If the disk does not have the right file system, then you will get the error message, such as above. In that case the disk has to be formatted first. ACTi camera provides convenient formatting function within Web Configurator.

Format



When the disk is inserted to the camera for the first time, it is recommended to format it, to make sure the file system of the disk would be compatible with camera.

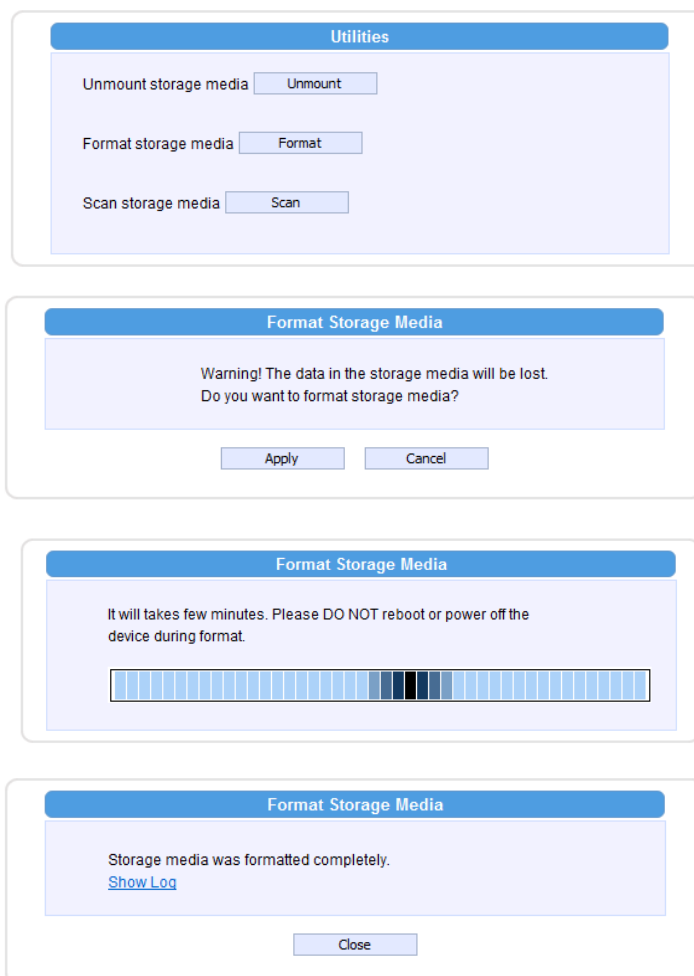

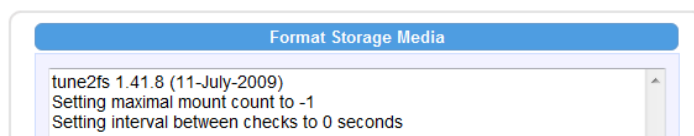




Format Failure


If the disk is damaged or it is not within the specifications of the camera, the formatting may fail. When this happens, there is no way to continue using that disk, and it has to be replaced with proper one.

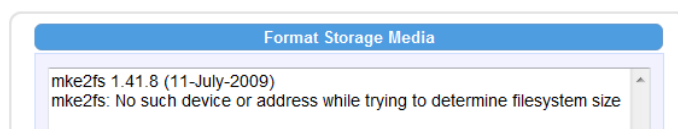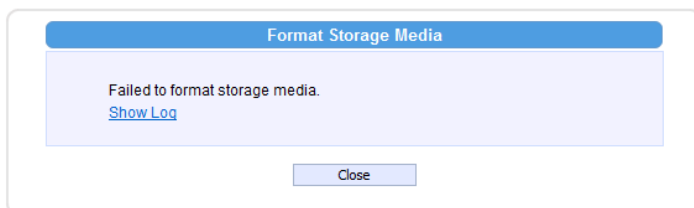

Scan



To check the “health” of the disk, it is possible to use the “Scan” function.

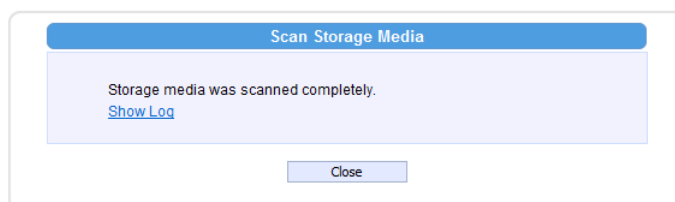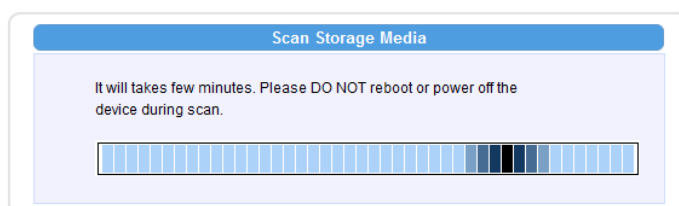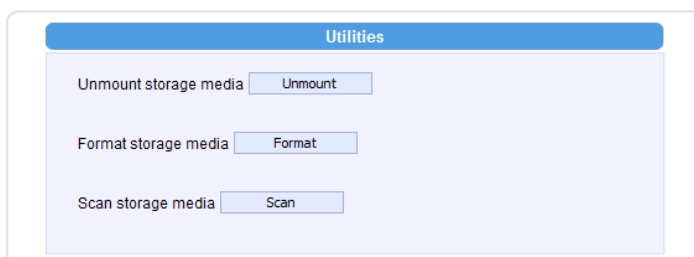

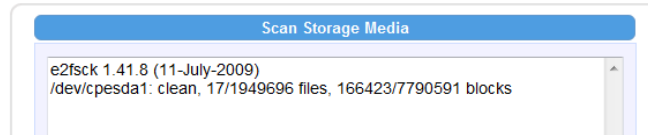


Scan Failure


The scanning would fail if the disk is not recognized by the camera. Make sure that the disk has been properly formatted and mounted to the camera.

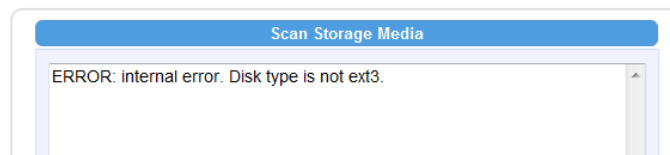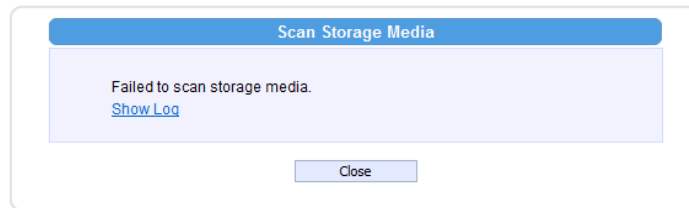

Setup

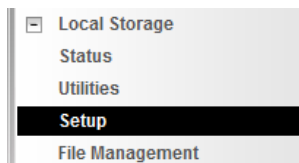


The “Setup” function provides the option to manage the file writing behavior of the camera. By default, the camera is set to “Remove old recordings when ran out of storage space automatically”. By using this mode, the camera’s recording process will not be interrupted when the disk becomes full – the oldest files will be overwritten by new recordings.

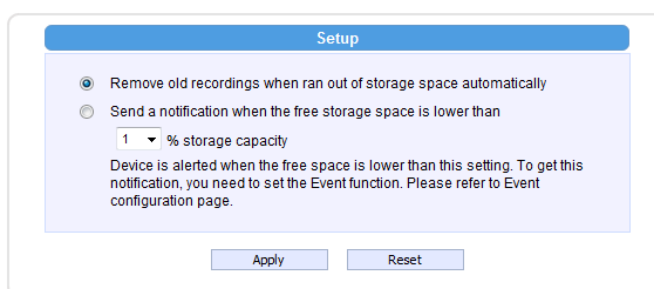


Please note that under this mode, there is a risk that important evidence may be deleted automatically over a period of time. Therefore, as long as “recycling” mode is used, the user should download the critical evidence files from the camera before they are erased by the camera.

When the “Send a notification when the free storage space is lower than...” option is chosen, then the existing files would not be overwritten by the camera and the recording process would stop when the disk is full.

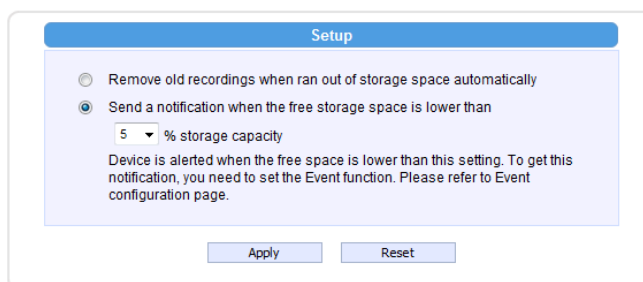


By this option, the possibility of sending notification e-mails automatically has been enabled. The % refers to the remaining size of available storage at which the camera should send a notification e-mail, in case such task has been listed in Event Handler of the camera. To actually make the e-mail notification work, please go to Event Handler (See “Event Handler with Local Storage” on page 91.) of the camera and set up the event rule where the selected trigger type is “disk space is low”.


File Management

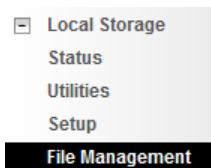

The File Management function is available only when the disk has been properly mounted to the camera. At first, the File Management page would be empty, because there are no files to be shown:

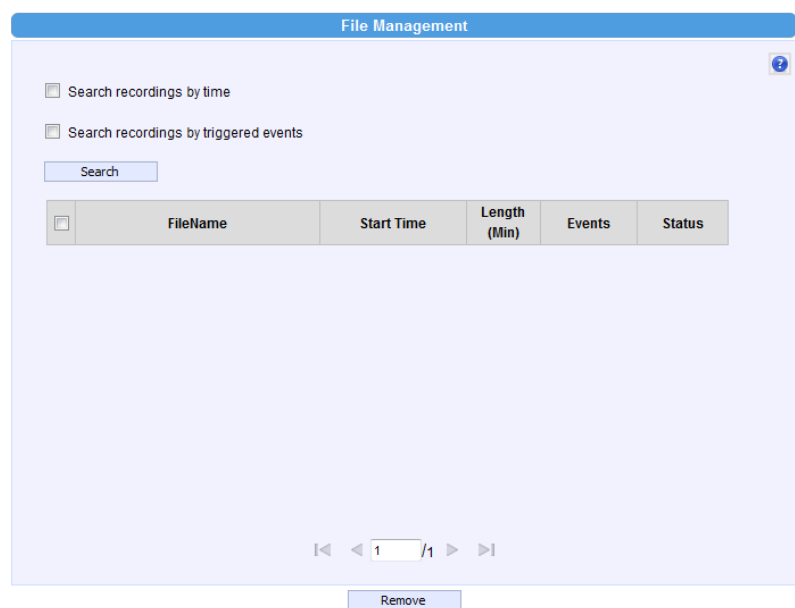

When clicking on the “?” mark on the upper right corner, the useful help message would appear:

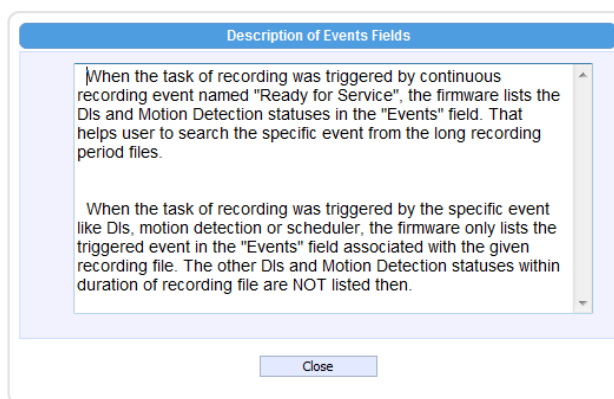

In order to let the camera record files either by event or by schedule, please go to Event Handler to set it up (“Event Handler with Local Storage” on page 91.). When the camera starts to record either videos or snapshots, you will be able to manage the files under “File Management” here.

File Management					
<input type="checkbox"/> Search recordings by time <input type="checkbox"/> Search recordings by triggered events <input type="button" value="Search"/>					
<input type="checkbox"/>	FileName	Start Time	Length (Min)	Events	Status
	video_2012-06-22-08-03-11_493-frag1.raw	20120622-08:33:14	7	MD1 SCH	Writing
<input type="checkbox"/>	video_2012-06-22-08-03-11_493.raw	20120622-08:03:11	31	MD1 SCH	Closed
<input type="checkbox"/>	video_2012-06-22-07-56-35_818.raw	20120622-07:56:35	1	MD1	Closed
<input type="checkbox"/>	video_12.06.22_07-51-45_677.raw	20120622-07:51:45	1	MD1	Closed
<input type="checkbox"/>	video_074920_146_120622.raw	20120622-07:49:20	1	MD1	Closed

The largest possible recording file is approximately 30 minutes. You can see the length of each file in the file list. In case of snapshots, the length is not available.

Under continuous recording mode, the camera will make sure that the file size would not exceed 30-31 minutes – it would start writing a next file when the first file is full. There is also a way to force the continuous recording files to be with shorter length. It is explained in the Event Handler section on page 91.

The file that is currently being saved will show the status “Writing”.

Search Recordings by Time

If you are looking for the recordings of specific time period, then you may check the “Search recordings by time”, and select the starting time of the searchable range as well as the length of the time period.

<input checked="" type="checkbox"/>	Search recordings by time
Date	2012 / 6 / 22 7 : 00
Time Period	60 Minutes
<input type="checkbox"/>	Search recordings by triggered events
<input type="button" value="Search"/>	

<input type="checkbox"/>	FileName	Start Time	Length (Min)	Events	Status
<input type="checkbox"/>	video_2012-06-22-07-56-35_818.raw	20120622-07:56:35	1	MD1	Closed
<input type="checkbox"/>	video_12.06.22_07-51-45_677.raw	20120622-07:51:45	1	MD1	Closed
<input type="checkbox"/>	video_074920_146_120622.raw	20120622-07:49:20	1	MD1	Closed

With search settings above, only those files will be listed which were recorded between 2012.6.22 7:00 and 2012.6.22 8:00.

Search Recordings by Triggered Events

Another convenient way of searching specific recording files is to define the events that were either the triggers of the recordings or occurred during the scheduled recording. Check the “Search recordings by triggered events” and choose one of the 4 event types – Dis, Motion, Schedule or Ready for Service. All these events and can be managed under Event Handler (“Event Handler with Local Storage” on page 91.).

☐ Search recordings by time
☒ Search recordings by triggered events
☐ Dis ☒ Motion ☐ Scheduler ☐ Ready for Service

Search

<input type="checkbox"/>	FileName	Start Time	Length (Min)	Events	Status
<input type="checkbox"/>	video_2012-06-22-08-03-11_493-frag1.raw	20120622-08:33:14	21	MD1 SCH	Writing
<input type="checkbox"/>	video_2012-06-22-08-03-11_493.raw	20120622-08:03:11	31	MD1 SCH	Closed
<input type="checkbox"/>	video_2012-06-22-07-56-35_818.raw	20120622-07:56:35	1	MD1	Closed
<input type="checkbox"/>	video_12.06.22_07-51-45_677.raw	20120622-07:51:45	1	MD1	Closed
<input type="checkbox"/>	video_074920_146_120622.raw	20120622-07:49:20	1	MD1	Closed

Download Recordings

You can download the files manually to remote PC by clicking on the File Name.

Delete Recordings

You can manually delete the files by filling the checkboxes and then pressing the “Remove” button.

<input type="checkbox"/>	FileName	Start Time	Length (Min)	Events	Status
<input type="checkbox"/>	video_2012-06-22-08-03-11_493-frag1.raw	20120622-08:33:14	12	MD1 SCH	Writing
<input type="checkbox"/>	video_2012-06-22-08-03-11_493.raw	20120622-08:03:11	31	MD1 SCH	Closed
<input checked="" type="checkbox"/>	video_2012-06-22-07-56-35_818.raw	20120622-07:56:35	1	MD1	Closed
<input checked="" type="checkbox"/>	video_12.06.22_07-51-45_677.raw	20120622-07:51:45	1	MD1	Closed
<input checked="" type="checkbox"/>	video_074920_146_120622.raw	20120622-07:49:20	1	MD1	Closed

<< < 1 / 1 > >>

Remove

Search Snapshots

If the event rule of the Event Handler defines that there should be Snapshots stored on local storage instead of Video, then the snapshots will appear in File Management's file list. The extension of snapshot file is "jpg".

☐ Search recordings by time
☐ Search recordings by triggered events

Search


<input type="checkbox"/>	FileName	Start Time	Length (Min)	Events	Status
<input type="checkbox"/>	snapshot_2012-06-22-09-03-42_245.jpg	20120622-09:03:42	0	MD1	Closed
<input type="checkbox"/>	snapshot_2012-06-22-09-03-11_044.jpg	20120622-09:03:11	0	SCH	Closed
<input type="checkbox"/>	snapshot_2012-06-22-09-02-26_708.jpg	20120622-09:02:26	0	MD1	Closed
<input type="checkbox"/>	video_2012-06-22-08-03-11_493-frag1.raw	20120622-08:33:14	29	MD1 SCH	Closed
<input type="checkbox"/>	video_2012-06-22-08-03-11_493.raw	20120622-08:03:11	31	MD1 SCH	Closed
<input type="checkbox"/>	video_2012-06-22-07-56-35_818.raw	20120622-07:56:35	1	MD1	Closed
<input type="checkbox"/>	video_12.06.22_07-51-45_677.raw	20120622-07:51:45	1	MD1	Closed
<input type="checkbox"/>	video_074920_146_120622.raw	20120622-07:49:20	1	MD1	Closed

<< 1 / 1 >>

Remove

View and Download Snapshots

By clicking on the snapshot file name in file list it is possible to view the snapshot within Web Configurator. To download the snapshot, right click on the picture and save it to the computer.

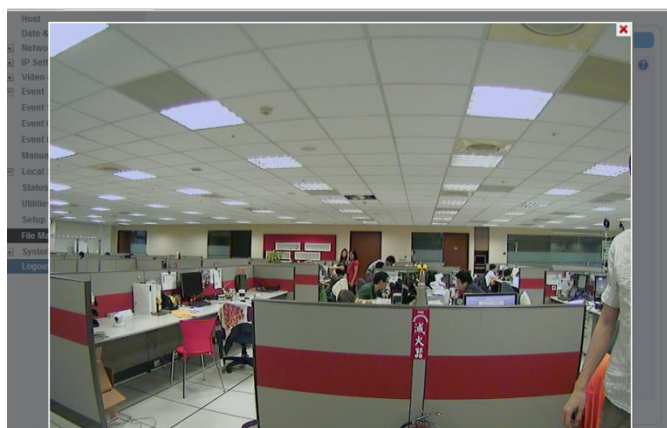

Deleting Snapshots

You can manually delete the snapshots by filling the checkboxes and then pressing the "Remove" button.


Special Rule!









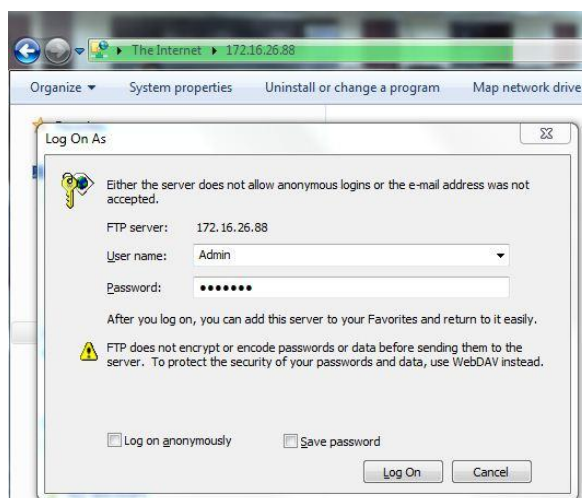





When the event triggered snapshot happens during the video recording process, then the camera will not save the snapshot to the local storage, to avoid redundant information and waste of

storage space, as the snapshot frame can be later extracted from video file instead.

Downloading Files by FTP Client

In addition to Web Configurator's File Management, it is also possible to use any of the FTP Clients to list and download the recordings from the local storage thanks to the built-in FTP Server of the camera. Use the **ftp://** followed by camera's IP and then type the camera's account and password (default is Admin, 123456).



 snapshot_2012-06-22-09-02-26_708.jpg	514 KB	JPG :
 snapshot_2012-06-22-09-03-11_044.jpg	518 KB	JPG :
 snapshot_2012-06-22-09-03-42_245.jpg	512 KB	JPG :
 snapshot_2012-06-22-09-05-11_079.jpg	515 KB	JPG :
 snapshot_2012-06-22-09-05-36_497.jpg	503 KB	JPG :
 snapshot_2012-06-22-09-07-11_096.jpg	514 KB	JPG :
 snapshot_2012-06-22-09-08-22_788.jpg	498 KB	JPG :
 snapshot_2012-06-22-09-09-02_207.jpg	501 KB	JPG :
 snapshot_2012-06-22-09-09-11_065.jpg	512 KB	JPG :
 snapshot_2012-06-22-09-11-11_053.jpg	512 KB	JPG :
 snapshot_2012-06-22-09-12-30_617.jpg	510 KB	JPG :
 snapshot_2012-06-22-09-13-11_076.jpg	516 KB	JPG :
 snapshot_2012-06-22-09-13-34_260.jpg	511 KB	JPG :
 snapshot_2012-06-22-09-15-11_094.jpg	517 KB	JPG :

Notice! You may download files via FTP for your convenience, but do not delete any of the files via FTP because it would cause inconsistency between camera's file database and actual file availability.


Event Handler with Local Storage

In order to save video clips or snapshots on a local storage, there has to be a task created under Event Handler system of the camera that defines what type of files and when are they to be recorded on local storage.

Event Handler supports following Recording methods:


1. Event triggered video recording or snapshots (recommended solution)
2. Scheduled video recording (including non-stop recording) or snapshots

To set up the event handler rule, you have to configure both “Event Configuration” and “Event List”.

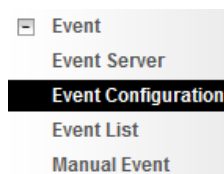


Event Triggered Video Recording

Under “Event Configuration” you can define the type of media (video, snapshot) and its properties.

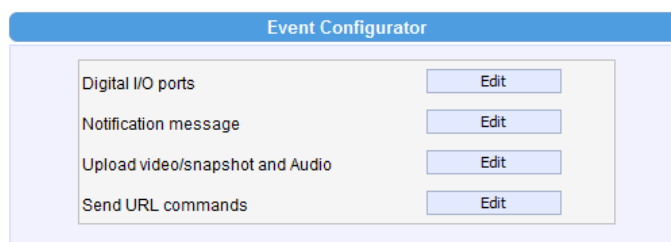

Select “Upload video/snapshot and Audio” to adjust the parameters of media.

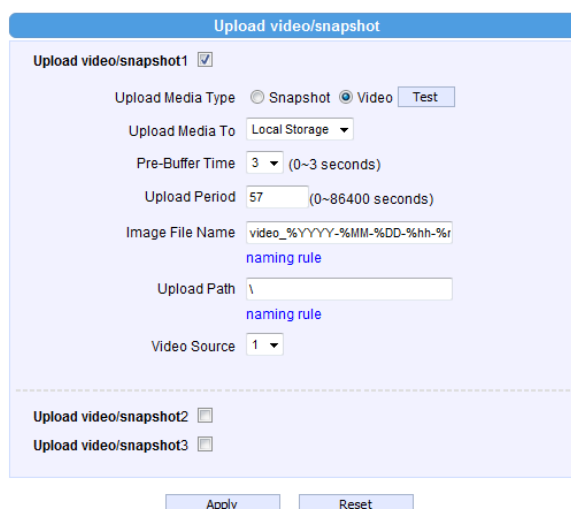

Check the "Upload Video/Snapshot1". Please note that later on scheduler page this item will be referred to as "Image 1". Let's see the example of video format first – Upload Media Type shall be Video.

Upload Media To shall be "Local Storage".

The camera has the capability to buffer up to 3 seconds of video at any time, so that we can include these 3 seconds of video to the file, to capture the moment right before the event occurred. With the settings of

Pre-Buffer Time = 3;

Upload Period = 57

the length of the video clip will be 1 minute.

You can freely decide the name of the file. Whatever name you choose, the camera will automatically append milliseconds in the end. It is recommended to include day code in file name so that later when the files are downloaded to remote computer, it is easier to pick up the right video.

For example, you may consider using following file name:

video_%YYYY-%MM-%DD-%hh-%mm-%ss

where %YYYY displays current year, %MM displays current month, %DD displays current day, %hh displays current hour, %mm displays current minute and %ss displays current second.


Notice! Please note that the camera uses its own date and time settings to write the file name, so please make sure the camera's date and time are correct!

Upload Path can be simply "\", which means that the files will be saved in root folder of the storage.

The video source can be either "1" or "2". If you want to have different video parameters for remote NVR recording and Local Storage recording, then you may consider adjusting camera's media 1 and media 2 settings accordingly and then choose the right video source in Event Handler page.

When done, just press "Apply" and move on to the "Event List", and pick any of the empty spots in the list of rules to create a new rule. In our example, we pick the rule 3 for setup.

Make sure to have the rule “Enabled” by filling the checkbox.

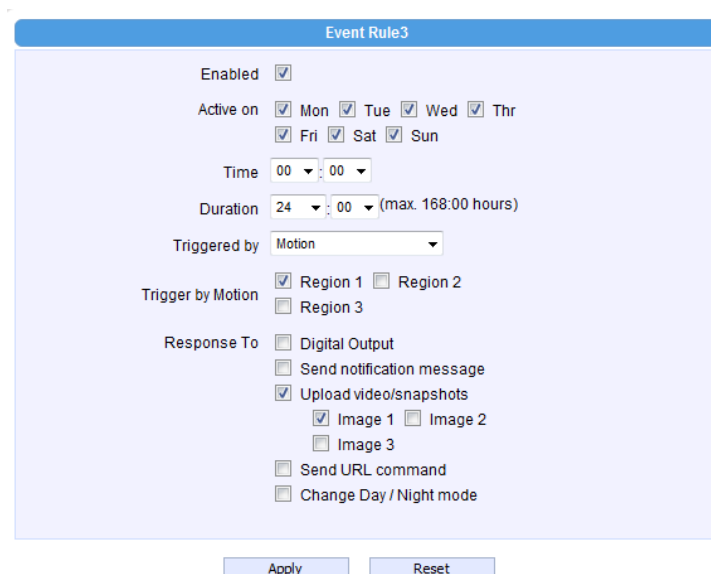


By the example above, the camera will be 24/7 on guard to watch for motion events. When motion detection region 1 detects intrusion, it will trigger the response of uploading “image 1” according to the parameters defined under “Event Configuration” earlier. In other words, whenever motion occurs, the camera will record 3 seconds of video before the moment of motion detection, and 57 seconds after that. The video file can then be found under “Local Storage” -> “File Management”.


Scheduled Video Recording

Although it is not really recommended to have full-time recording for MicroSDHC due to it is not physically as capable as hard disk, the firmware still allows it to be configured for full-time recording mode.

Let's use the same media parameters as in previous example. Since the time unit of event rule is minute based, we should make sure that the media settings (in seconds) would add up as a round number in minutes. In this case, 3+57 seconds is exactly 1 minute.

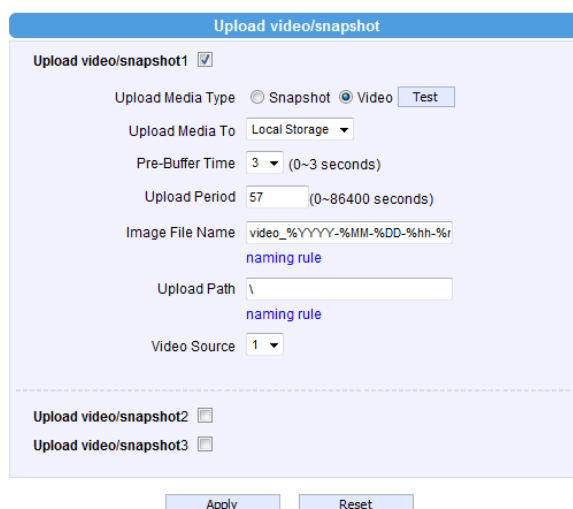


In the event rule page, choose Trigger by “Scheduler” and choose Once Every 1 Minute. The rest of the items are the same as in previous example.

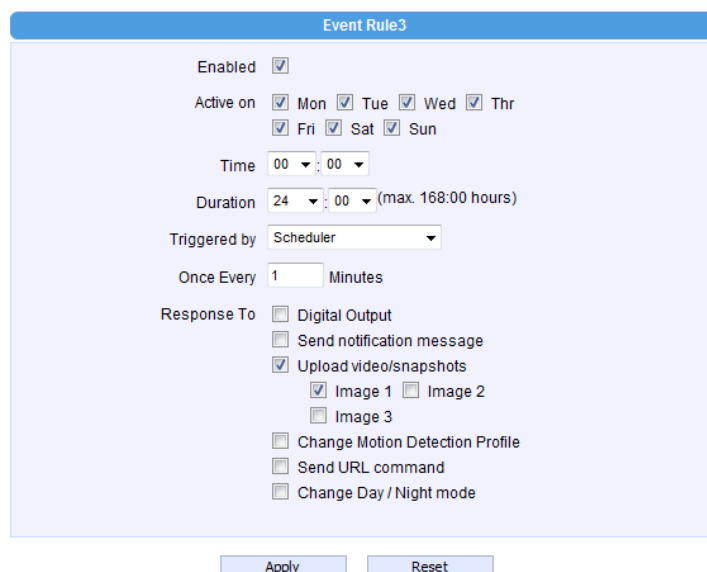

As a result, the camera will be continuously recording, having each video file with the length of 1 minute.

Event Triggered Snapshots


Choose the “Upload video/snapshot” item in the “Event Configuration” page and check the Upload Media Type as “Snapshot” if you want to save images to camera’s local storage.

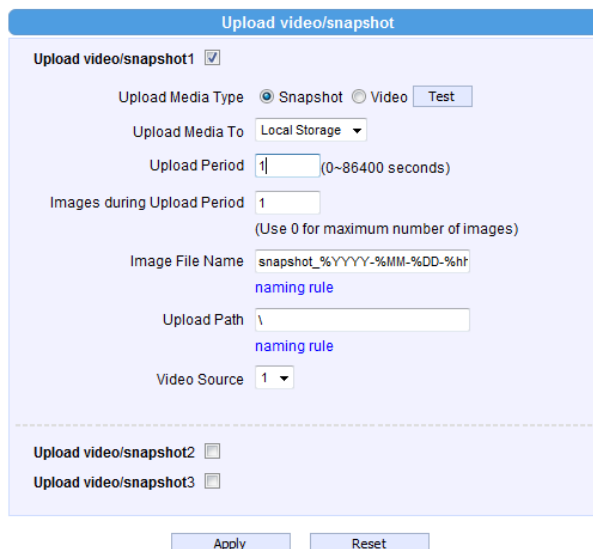

With the settings above, it would create 1 snapshot within 1 second from the moment of triggered event using following file name snapshot_%YYYY-%MM-%DD-%hh-%mm-%ss .

The naming rule of the file is similar to the video files. Video Source can be either “1” or “2”, depending on customer’s requirements. If you want VGA snapshots on local storage while NVR is getting megapixel video stream, you can configure Media 2 as VGA, and set Video Source as “2”.

The event rule can be exactly the same as in case of video upload:

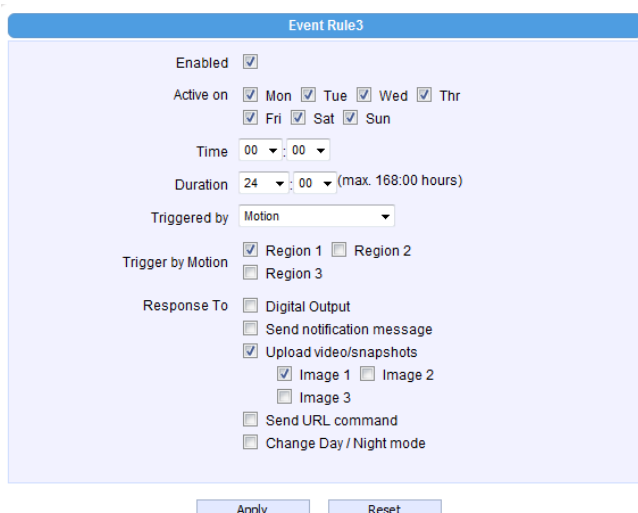

Scheduled Snapshots

Media configuration:

Upload video/snapshot

Upload video/snapshot1 ☒

Upload Media Type ☒ Snapshot ☐ Video

Upload Media To Local Storage

Upload Period 1 (0~86400 seconds)

Images during Upload Period 1 (Use 0 for maximum number of images)

Image File Name snapshot_YYYY-MM-DD-%h naming rule

Upload Path \ naming rule

Video Source 1

Upload video/snapshot2 ☐

Upload video/snapshot3 ☐

Apply

Reset

Schedule configuration:

Event Rule3

Enabled ☒

Active on ☒ Mon ☒ Tue ☒ Wed ☒ Thr ☒ Fri ☒ Sat ☒ Sun

Time 00 : 00

Duration 24 : 00 (max. 168:00 hours)

Triggered by Scheduler

Once Every 1 Minutes

Response To ☐ Digital Output ☐ Send notification message ☒ Upload video/snapshots ☒ Image 1 ☐ Image 2 ☐ Image 3 ☐ Change Motion Detection Profile ☐ Send URL command ☐ Change Day / Night mode

Apply

Reset

As a result, There will be one snapshot from Media 1 stored on local storage once every minute, 24 hours a day. The snapshots can be accessible from "Local Storage" -> "File Management"


System

Click the  [System] item on the "Setup Page".



User Account

Click the [User Account Setting] item to display the "User Account Setting Page".

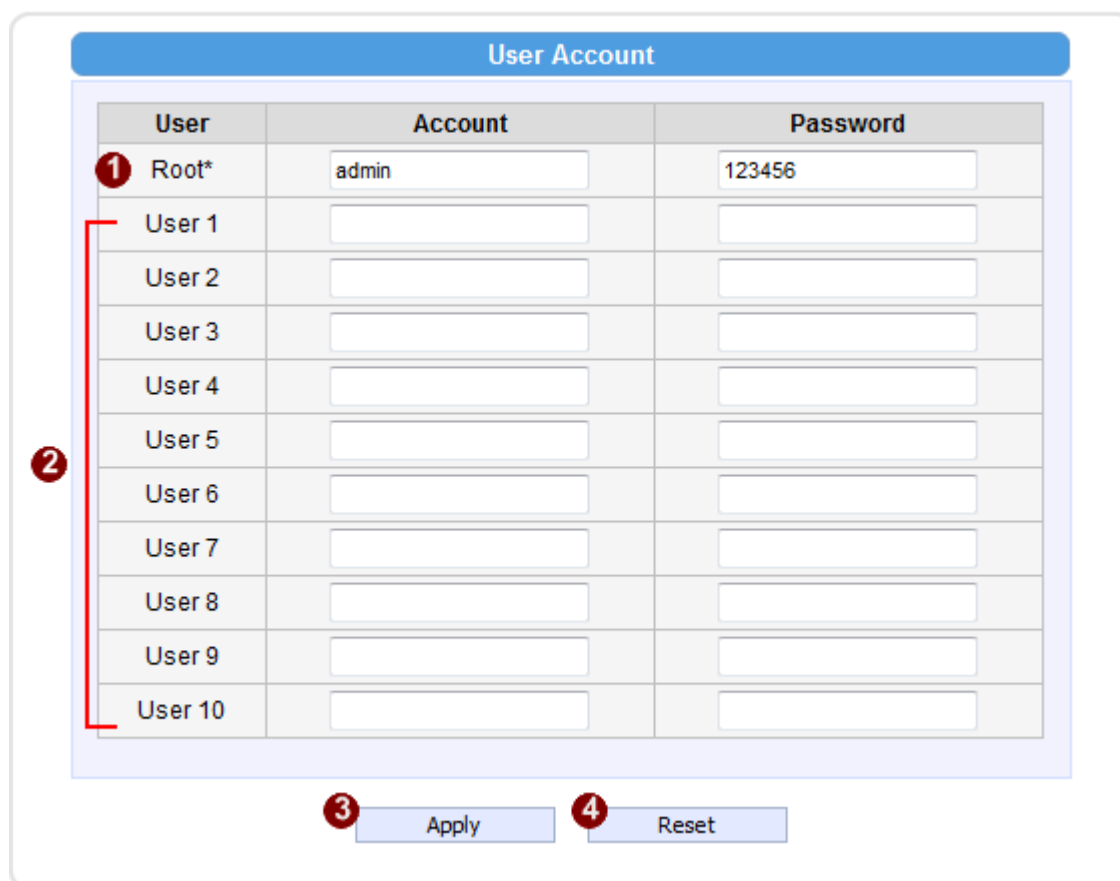

User	Account	Password
1 Root*	admin	123456
User 1		
User 2		
User 3		
User 4		
User 5		
User 6		
User 7		
User 8		
User 9		
User 10		

3 Apply **4** Reset

Setup the account names and their passwords. There are 1 root **1** (administrator) account and 10 common user accounts **2**. Administrator account allows the user to watch the live view and setup everything; but common user account allows user only to watch the live image.

Click the **3** [Apply] button to confirm the settings or click the **4** [Reset] button to re-enter the parameters.

System Info

Click the [System Info] item to show details about this IP device including system information, WAN status and system log. Refer to the table below for how to configure each setting.

View the information at the 3 textboxes. This information is very useful to understand the IP device status and to resolve any problem that might occur.

System Information

System Information:

Firmware Version = A1D-311-V5.02.26-AC
 MAC Address = 00:0F:7C:06:13:7B
 Production ID = KCM5111-11A-X-00008
 Factory Default Type = Two-Way Audio (0x71)
 Company Name = ACTi Corporation
 WEB Site = www.acti.com
 Profile ID = OV5653-KB2_V110106A
 Sensor Board = OV5653

WAN Status :

IP Address : 192.168.0.100
 Netmask : 255.255.255.0
 Gateway : 192.168.0.254
 DNS Server :
 DDNS Host :
 WAN Connect Status : Disconnect
 DNS Connect Status : Disconnect
 DDNS Connect Status: Disconnect

System Log :

Bootloader Version BOOTLOADER-310-V01.12
 Loading GPIO driver.
 Devcap Version 0x1FF1
 Loading RS232 driver.
 Loading MAC driver.
 Loading I2C BUS driver.
 Loading Audio driver.
 Loading SD Card driver.

Config file:

The unit's parameters and their current settings.

Always attach the server report when contacting your support channel.

Third party software licenses.

Parameter List

Server Report

Show Licenses


Column	Description
System info	It shows the firmware version, MAC address, production ID, and factory default type of IP device.
WAN status	It shows the WAN port's IP address, netmask, gateway, DNS server, DDNS host and connection status.
System log	It shows the system event. This column is very useful to as a diagnostic tool. At the bottom of this area is the ISP firmware version, which is an useful diagnostic parameter.

Click [Parameter List] to see all configurations of the IP device.

Click [Server Report] to export related information while reporting to your support channel.

Factory Default

Click the [Factory Default] item to display the "Factory Default Page".

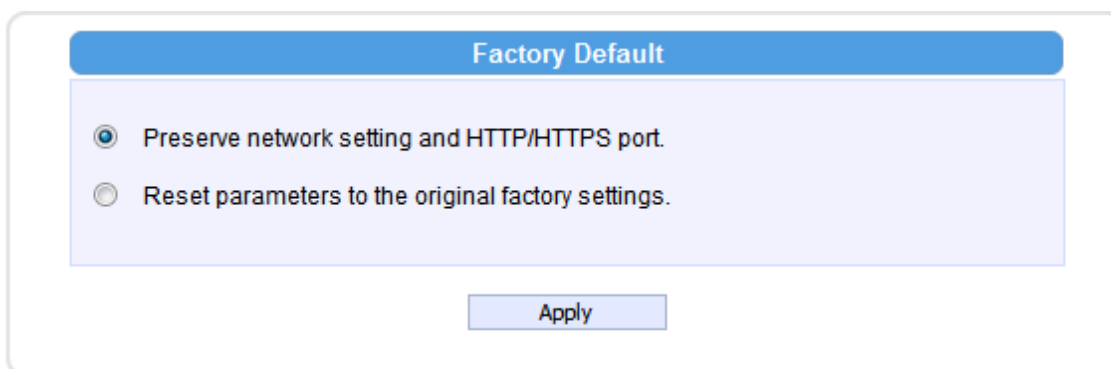


If you want to keep network settings and restore other settings to factory default, please select the first option. If you select the second one instead, all the settings would be removed during factory default. You will have to use factory default IP setting to connect to this camera. Please refer to previous login section.

Click the [Apply] button to show a warning dialog that reminds you again before restoring the device to factory default.


Firmware Upload

Click the [Firmware Upload] item to display the “Firmware Upgrade Page”. Upgrade the IP device’s firmware through this page with the following instructions. You may upgrade firmware for individual cameras with this function. To upgrade camera firmware in batches, please use IP utility, which can be freely downloaded from website. The firmware file you download from website will contain one .upg file, and one .md5 file. Uploading firmware through Web Configurator uses only the .upg file. You will need both files if you are doing multiple upgrades with IP Utility.

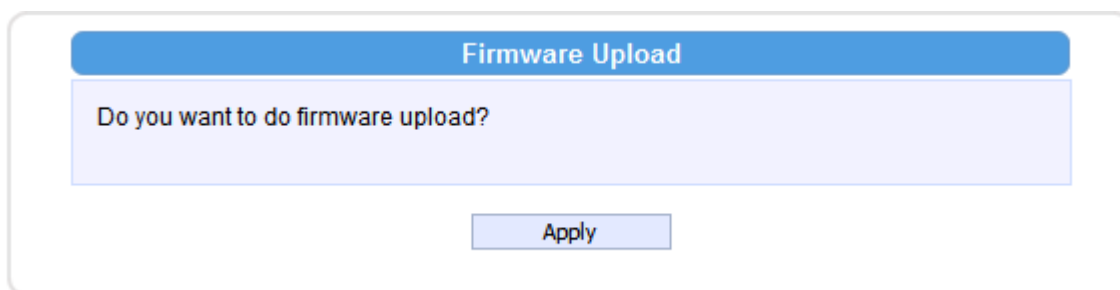

The image shows a web interface titled "Firmware Upload". Below the title bar, there is a light blue box containing the text "Do you want to do firmware upload?". At the bottom center of this box is a button labeled "Apply".

Click the [Apply] button. The “Firmware Upgrade Page-2” will be displayed as below.

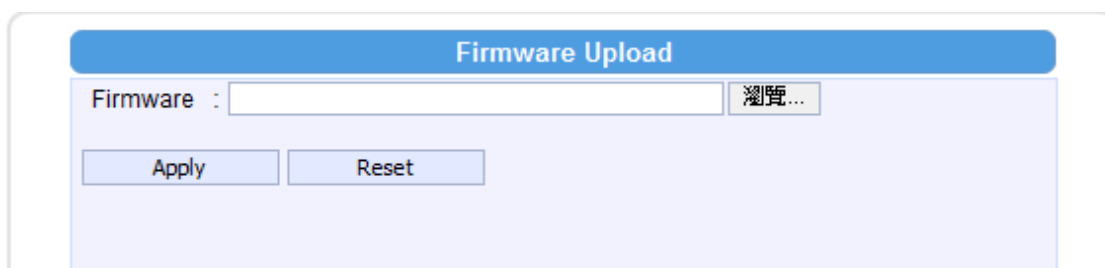

The image shows a web interface titled "Firmware Upload". Below the title bar, there is a text input field labeled "Firmware :". To the right of the input field is a button labeled "瀏覽..." (Browse...). Below the input field and button are two buttons: "Apply" and "Reset".

Click [Browse] to select the upgrade image file. You can always get the latest version at our website. Click the [Apply] button to start upgrade.


The upgrade process window will show a progress bar indicating upgrade status.

Once the process is finished, you will get an “OK” message and system will reboot itself.

NOTE: If you cancel the firmware upgrade during upgrade process, the browser window will be closed

Save & Reboot

This section tells you how to save all the settings and reboot this IP device. This is critical because some settings might not take effect before save and reboot. Click the [Save & Reboot] item to display the "Reboot Page".

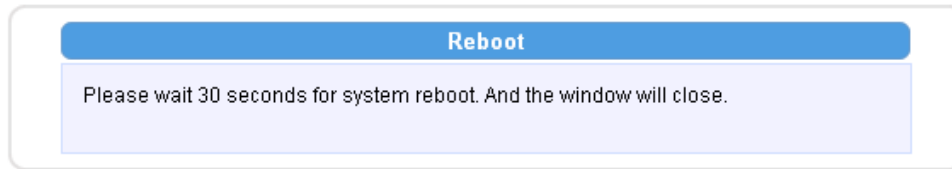

The Action LED indicator will go dark to indicate that the IP device is rebooting. After around 30 seconds, the Action LED will light up again to indicate that the reboot is completed.

Logout

Clicking this item allows you to log out of the IP device. Be sure to logout this IP device once your setting is completed.